


# BOARDWALK™ BENCH

## SURFACE MOUNT INSTALLATION INSTRUCTIONS

### MOUNTING KIT (SOLD SEPARATELY)


7/32" hex bit for  
tamper-resistant bolts

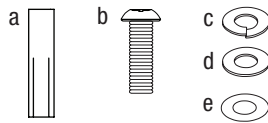


### TOOLS NEEDED



pencil



3/16", 3/8" & 1/2" drill  
bits for concrete

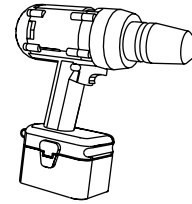


hammer drill



steel  
wire brush




1/4" punch



hammer

### STEP BY STEP FOR BOARDWALK SURFACE MOUNT BENCH MODELS

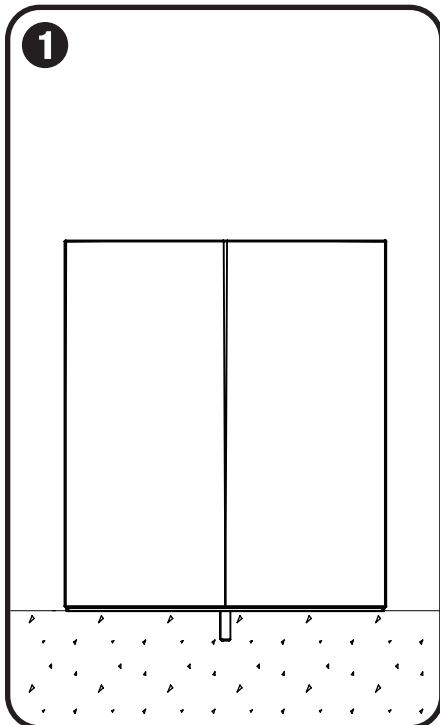

#### Mark hole locations

- Place bench in desired location. Mark center of each hole location with a pencil.


NOTE: Only one side of bench is shown. The holes on both ends of the bench will need to be marked.



#### Drill holes

- Use hammer drill to drill 1-7/8" deep x 1/2" diameter anchor hole at each marked location using a 1/2" drill bit suitable for concrete drilling.

NOTE: Forms+Surfaces recommends starting holes with 3/16" diameter drill bit followed by 3/8" and finally 1/2" for maximum accuracy.

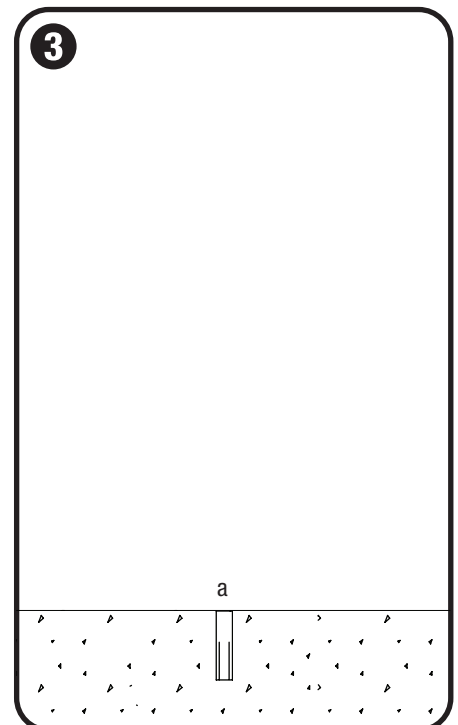


#### Fill holes & insert anchors

- Use compressed air and steel wire brush to clean each anchor hole.
- Insert 3/8"-16 x 1-1/2" anchor (a) into each anchor hole and use hammer to tap anchor tops flush with the ground level.
- Use 1/4" punch and hammer to set anchors by driving down the center of each anchor until it stops.

# BOARDWALK™ BENCH


SURFACE MOUNT INSTALLATION INSTRUCTIONS

## STEP BY STEP FOR BOARDWALK SURFACE MOUNT BENCH MODELS

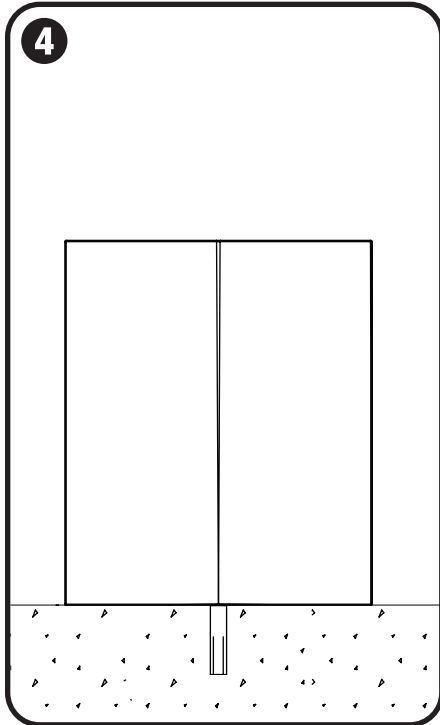


### Position bench

- Position bench so that mounting holes line up with anchors.

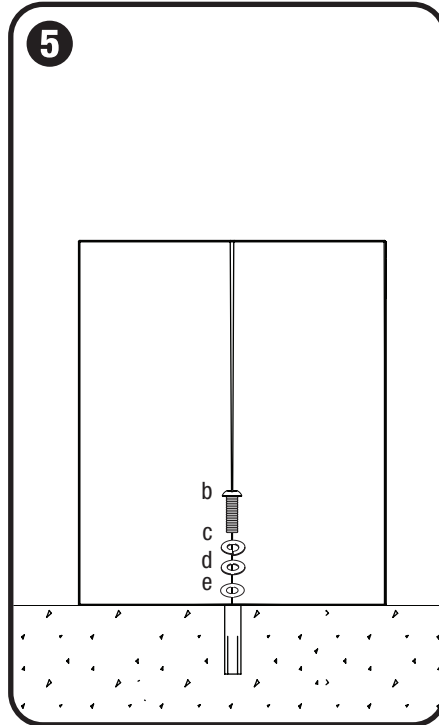

### Attach bench

- Slide 3/8" stainless steel lock washer (c), 3/8" stainless steel flat washer (d), and 3/8" nylon flat washer (e) onto each 3/8"-16 x 1" tamper-resistant button head cap bolt (b).
- Insert bolts into mounting holes in bench and thread into anchors using 7/32" hex bit for tamper-resistant bolts.

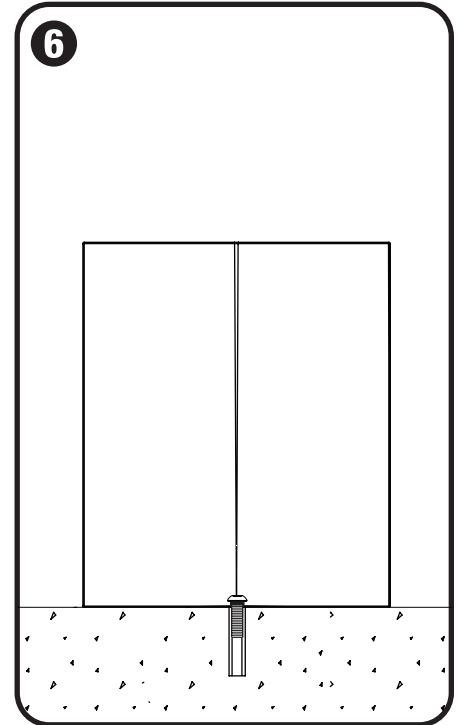

### Tighten bolts

- Tighten bolts until snug.