


# TRIO™ BENCH

## SURFACE MOUNT INSTALLATION INSTRUCTIONS


### MOUNTING KIT (SOLD SEPARATELY)



### TOOLS NEEDED

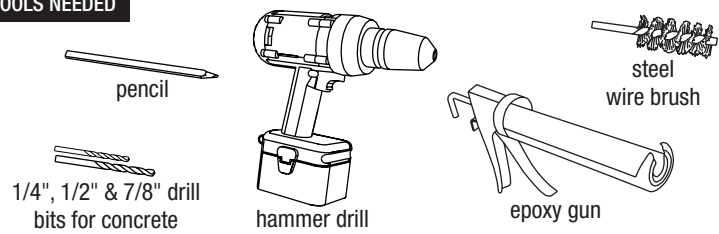

### STEP BY STEP FOR ALL TRIO BENCHES (SBTRO-72B SHOWN)

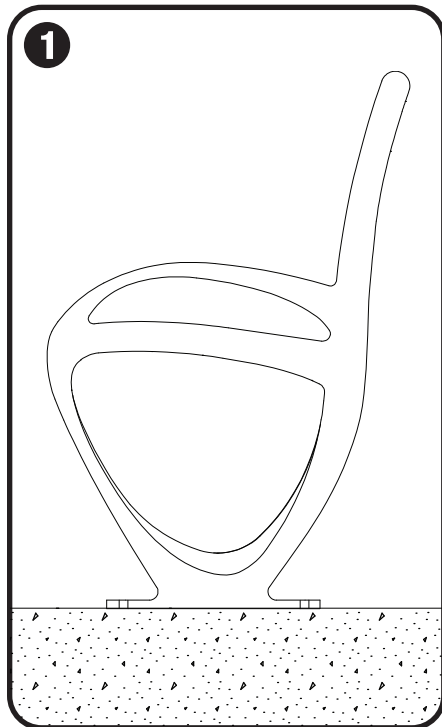

#### 1 Mark hole locations

- Place bench in desired location. Mark center of each hole location with a pencil.


NOTE: Ensure that the feet of the bench are level and even with the ground surface. There must be no gapping.



#### 2 Drill holes

- Use hammer drill to drill 5" deep x 7/8" diameter anchor hole at each marked location using a 7/8" drill bit suitable for concrete drilling.

NOTE: Forms+Surfaces recommends starting holes with 1/4" diameter drill bit followed by 1/2" and finally 7/8" for maximum accuracy.

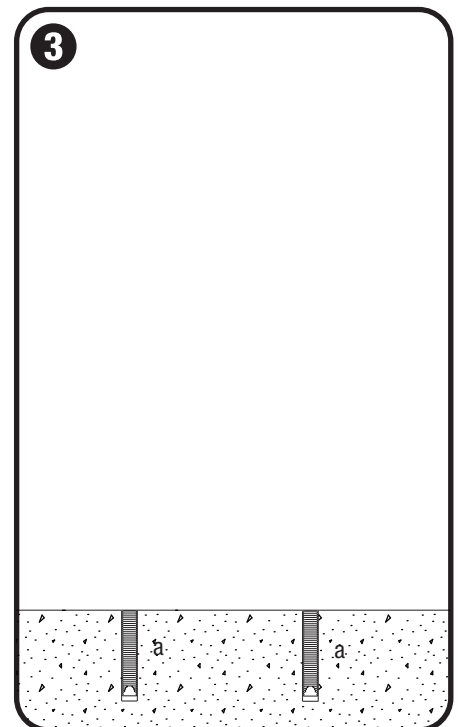


#### 3 Fill holes & insert anchors

- Use compressed air and steel wire brush to clean each anchor hole in accordance with epoxy instructions.
- Use epoxy gun to fill each anchor hole 5/8 of the hole depth in accordance with epoxy instructions.
- Insert 1/2"-13 x 5" epoxy anchor (a) into each anchor hole so anchor top is flush with ground. Allow proper curing time according to cure schedule on epoxy instructions before moving on to step 4.

# TRIO™ BENCH


## SURFACE MOUNT INSTALLATION INSTRUCTIONS

FOR ALL TRIO BENCHES (SBTRO-72B SHOWN)

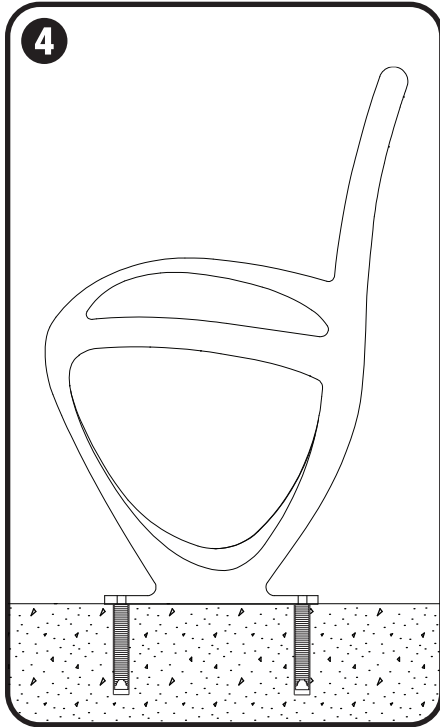


### Position bench

- Position bench so that mounting holes line up with anchors.

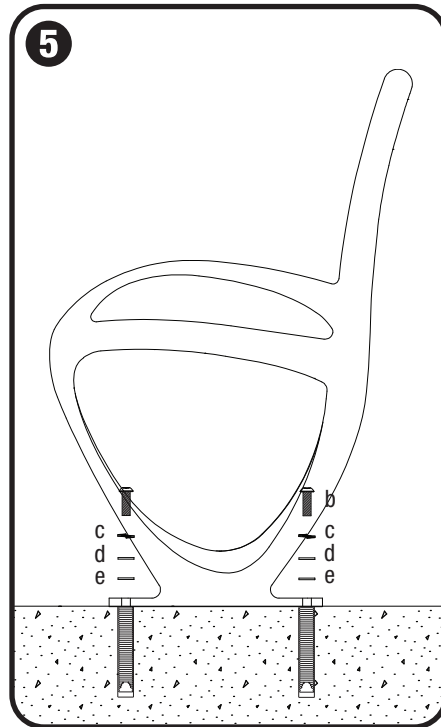

### Attach bench

- Slide 1/2" stainless steel lock washer (c), 1/2" stainless steel flat washer (d), and 1/2" nylon flat washer (e) onto each 1/2"-13 x 1-1/2" tamper-resistant button head cap bolt (b).
- Insert bolts into mounting holes in bench and thread into anchors using 5/16" hex bit for tamper-resistant bolts.

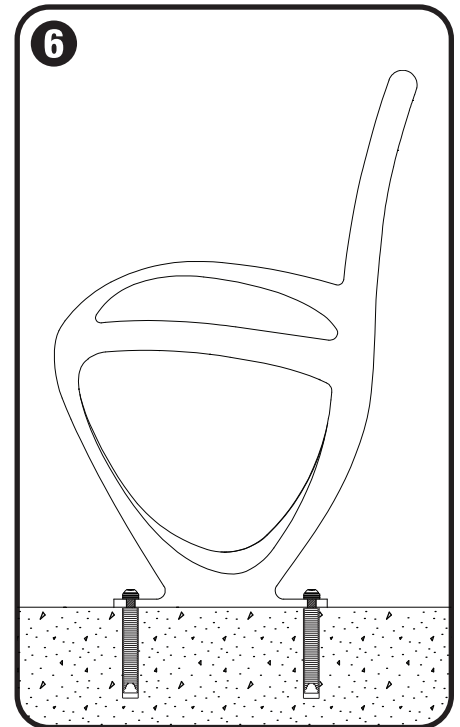

### Tighten bolts

- Tighten bolts until snug.