


UNIVERSAL™ PLANTER

SURFACE MOUNT WITHOUT CONCRETE BASE INSTALLATION INSTRUCTIONS

MATERIALS INCLUDED

7/32" hex bit for tamper-resistant screws




TOOLS NEEDED

pencil

3/16", 3/8" & 1/2" drill bits for concrete




hammer drill

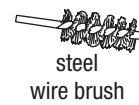

steel wire brush




1/4" punch

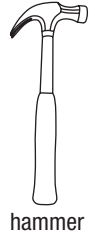

hammer

STEP BY STEP FOR ALL SURFACE MOUNTED UNIVERSAL PLANTERS WITHOUT CONCRETE BASES

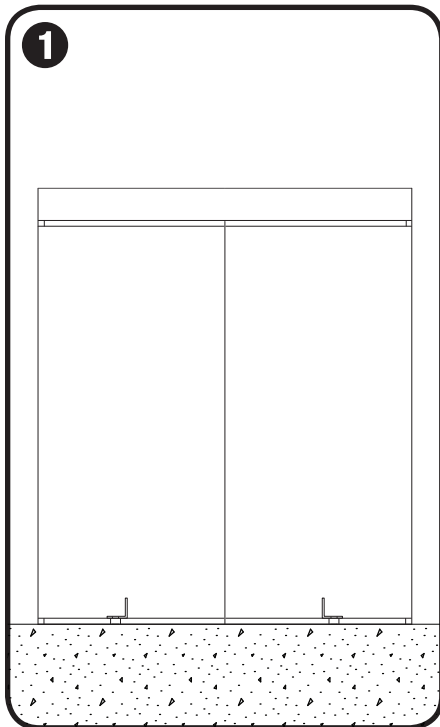

Mark hole locations


- Place unit in desired location. Mark center of each hole location in base with a pencil.



Drill holes

- Use hammer drill to drill 1-7/8" deep x 1/2" diameter anchor hole at each marked location using a 1/2" drill bit suitable for concrete drilling.

NOTE: Forms+Surfaces recommends starting holes with 3/16" diameter drill bit followed by 3/8" and finally 1/2" for maximum accuracy.

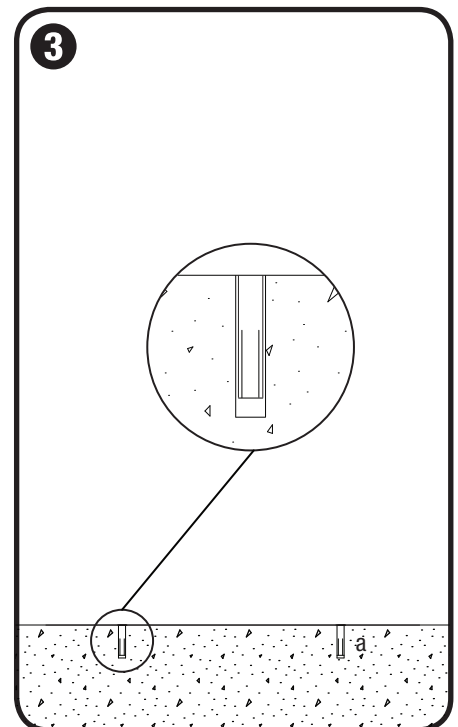


Insert & set anchors

- Use compressed air and steel wire brush to clean each anchor hole.
- Insert 3/8"-16 x 1-1/2" anchor (a) into each anchor hole and use hammer to tap anchor tops flush with ground level.
- Use 1/4" punch and hammer to set anchors by driving down the center of each anchor until it stops.

UNIVERSAL™ PLANTER


SURFACE MOUNT WITHOUT CONCRETE BASE INSTALLATION INSTRUCTIONS

STEP BY STEP FOR ALL SURFACE MOUNTED UNIVERSAL PLANTERS WITHOUT CONCRETE BASES

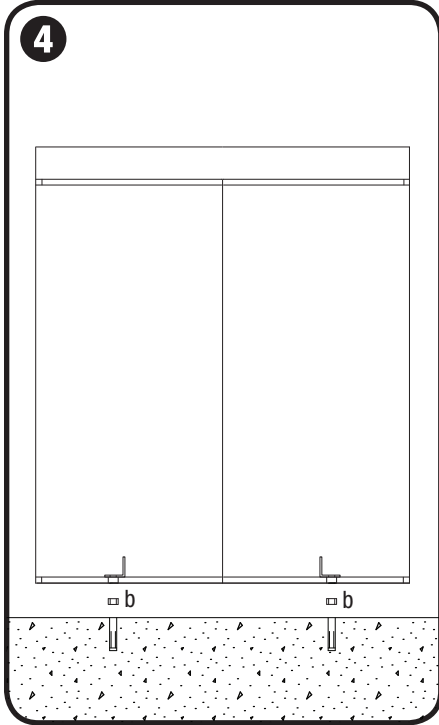


Insert spacers & position unit

- Insert aluminum spacers (b) under mounting holes in base.
- Position unit so that mounting holes and aluminum spacers line up with anchors.

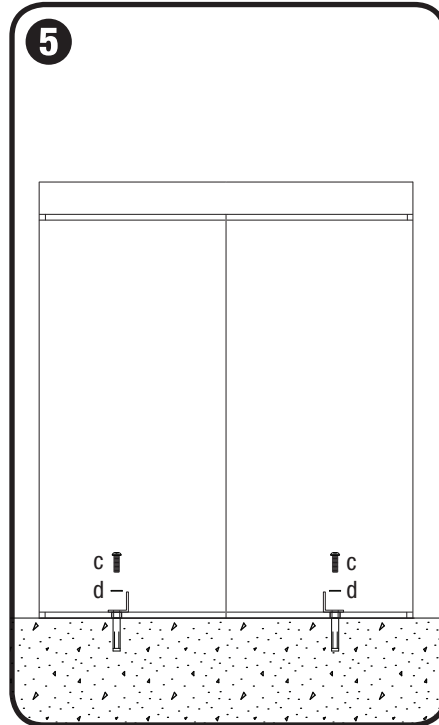

Attach unit

- Slide 3/8" stainless steel lock washer (d), onto each 3/8"-16 x 1-1/2" tamper-resistant button head cap screw (c).
- Insert screws into mounting holes in receptacle and aluminum spacers and thread into anchors using provided 7/32" hex bit for tamper-resistant screws.

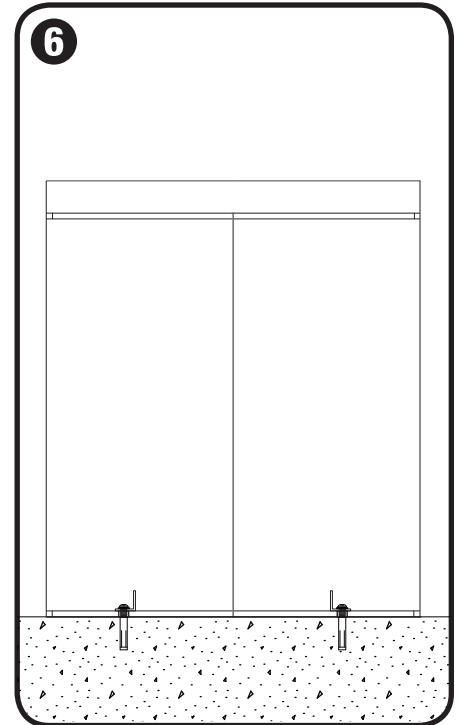

Tighten screws

- Tighten screws until snug.