
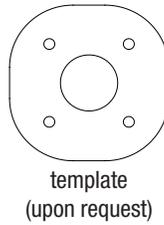



CORDIA™ PEDESTRIAN

SURFACE MOUNT INSTALLATION INSTRUCTIONS


MOUNTING KIT (SOLD SEPARATELY)



TOOLS NEEDED




STEP BY STEP FOR ALL CORDIA PEDESTRIANS

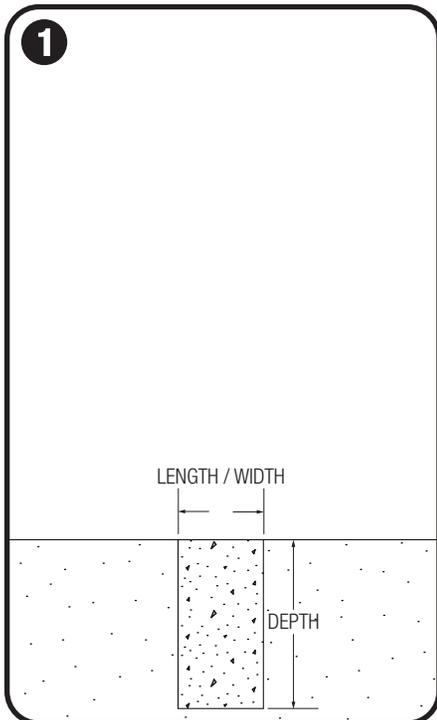


Pour concrete footer

- Mix and pour concrete footer according to concrete manufacturer's instructions.
- A sufficient footer size depends on frost and other conditions to be determined by the installer. A minimum of a 24" square x 36" deep footer is recommended.

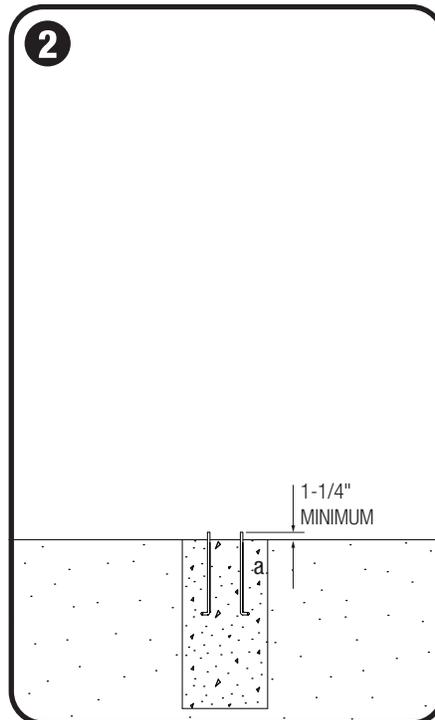

Insert J-bolt anchors

- Insert 3/4"-10 x 24" galvanized steel J-bolt anchors (a) into concrete.
- Use template to position J-bolt anchors in proper locations. Tops of J-bolt anchors must be a minimum of 1-1/4" above concrete surface.
- Allow concrete to set completely, in accordance with concrete manufacturer's instructions, before moving to step 3.

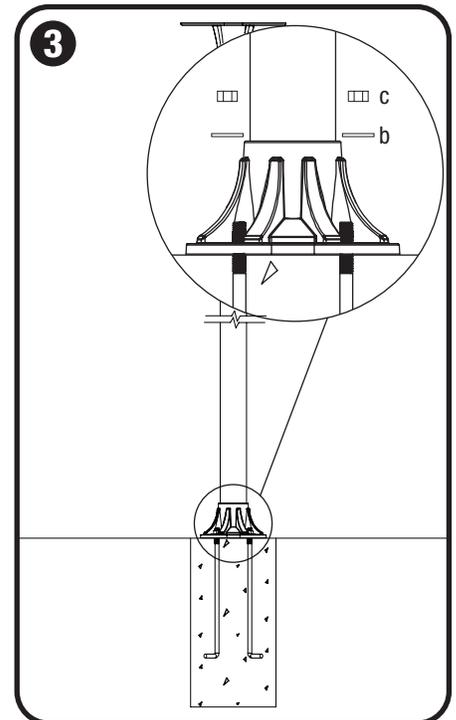


Position & attach pedestrian

- Slide pedestrian base plate over J-bolt anchors and lower pedestrian to concrete level. Keep supported until attached and tightened.
- Slide 3/4" washer (b), then thread 3/4" 10 nut (c) onto each J-bolt anchor.

CORDIA™ PEDESTRIAN

STEP BY STEP FOR ALL CORDIA PEDESTRIANS

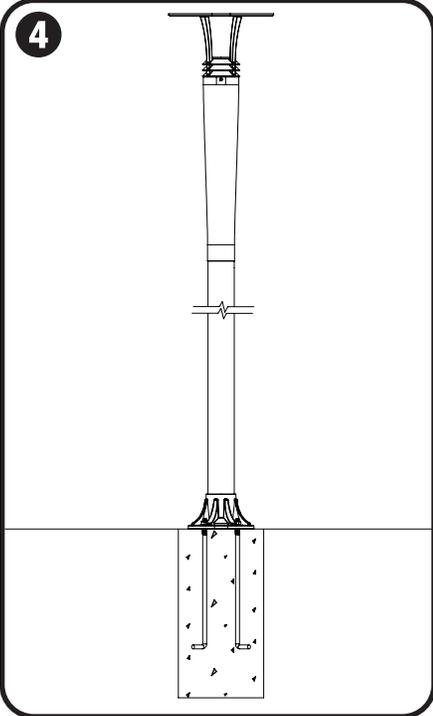

Tighten nuts

- Use 1-1/8" socket and socket wrench to tighten all nuts until snug.