

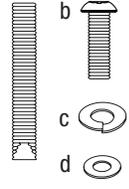



SOLERIS SUNSHADE

SURFACE MOUNT WITH TANGENT TABLE ENSEMBLE INSTALLATION INSTRUCTIONS


INCLUDED	MOUNTING KIT (SOLD SEPARATELY)	TOOLS NEEDED
 <p>locking pin</p>	 <p>epoxy</p>  <p>5/16" hex bit for tamper-resistant bolts</p>  <p>a b c d</p>	 <p>1/4", 1/2" & 7/8" drill bits for concrete</p>  <p>pencil</p>  <p>ratchet</p>  <p>hammer drill</p>  <p>steel wire brush</p>

STEP BY STEP FOR SOLERIS SUNSHADE USED WITH TANGENT TABLE ENSEMBLE (6-SEAT TANGENT ENSEMBLE SHOWN)

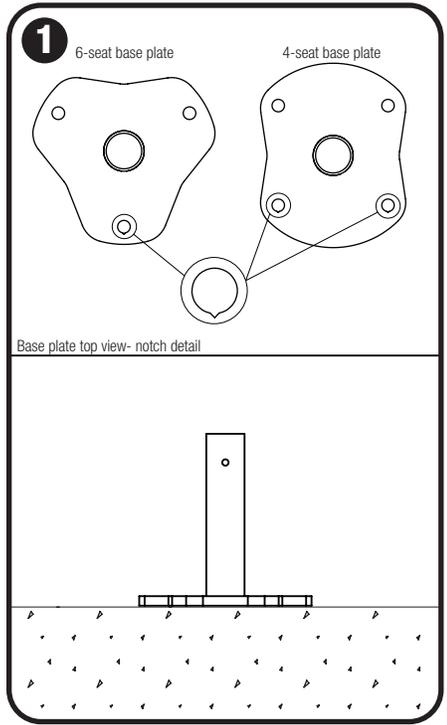

Mark hole locations


- Place the sunshade base plate in desired location. Mark center of each hole location with a pencil. Mounting holes are located on the sunshade's base plate.
- To show multiple Soleris Sunshades in the same orientation, align the notch on the base plates (detail above) in the same direction.

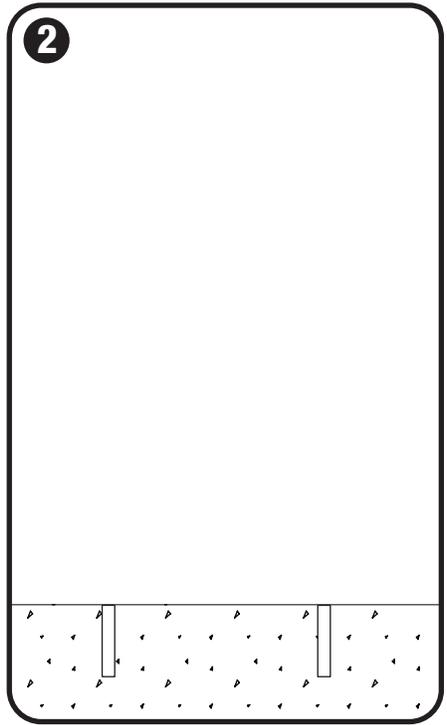

Drill holes

- Use hammer drill to drill 5" deep x 7/8" diameter anchor holes at each marked location using a 7/8" drill bit suitable for concrete drilling.

NOTE: Forms+Surfaces recommends starting holes with 1/4" diameter drill bit followed by 1/2" and finally 7/8" for maximum accuracy.

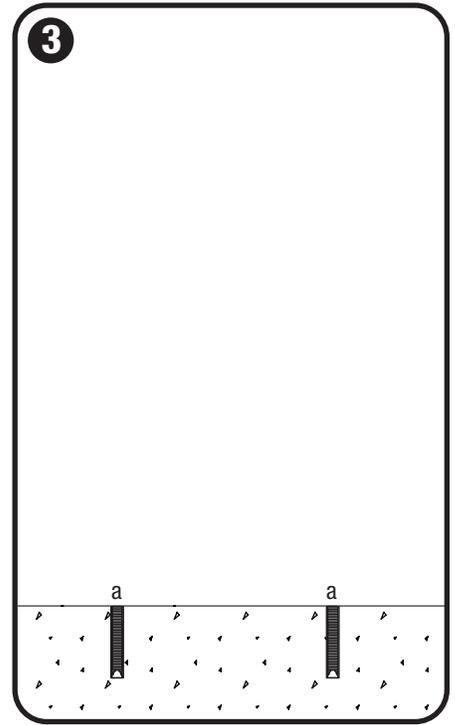


Fill holes & insert anchors

- Use compressed air and steel wire brush to clean each anchor hole in accordance with epoxy instructions.
- Use epoxy in epoxy gun to fill each anchor hole 5/8" of the hole depth in accordance with epoxy instructions.
- Insert 1/2"-13 x 5" epoxy anchor (a) into each anchor hole so anchor top is flush with ground. Allow proper curing time according to cure schedule on epoxy instructions before moving on to Step 4.

SOLERIS SUNSHADE


SURFACE MOUNT WITH TANGENT TABLE ENSEMBLE INSTALLATION INSTRUCTIONS

STEP BY STEP FOR SOLERIS SUNSHADE USED WITH TANGENT TABLE ENSEMBLE (6-SEAT TANGENT ENSEMBLE SHOWN)

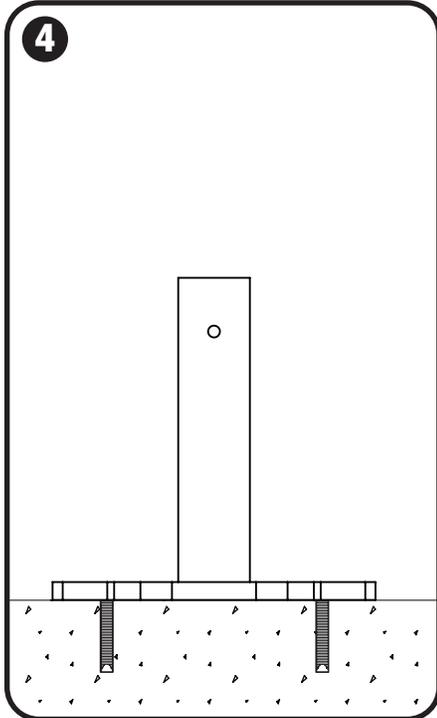


Position baseplate

- Position baseplate so that mounting holes line up with anchors.

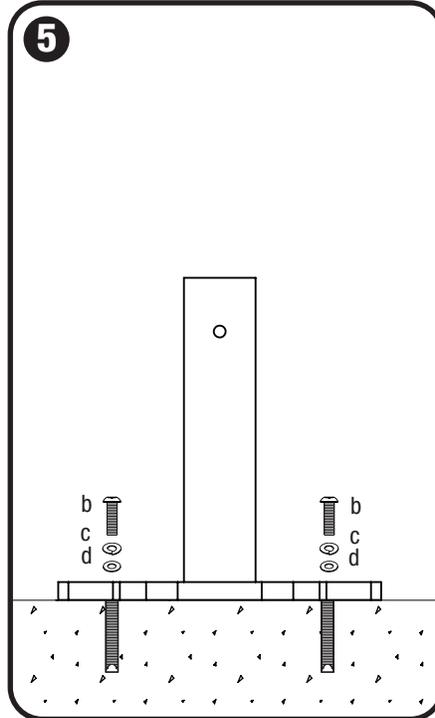

Attach baseplate

- Slide 1/2" stainless steel lock washer (c), and 1/2" stainless steel flat washer (d), onto each 1/2"-13 x 1.5" tamper-resistant button head cap bolt (b).
- Insert bolts into mounting holes in the sunshade's base plate and thread into anchors using 5/16" hex bit for tamper-resistant bolts.

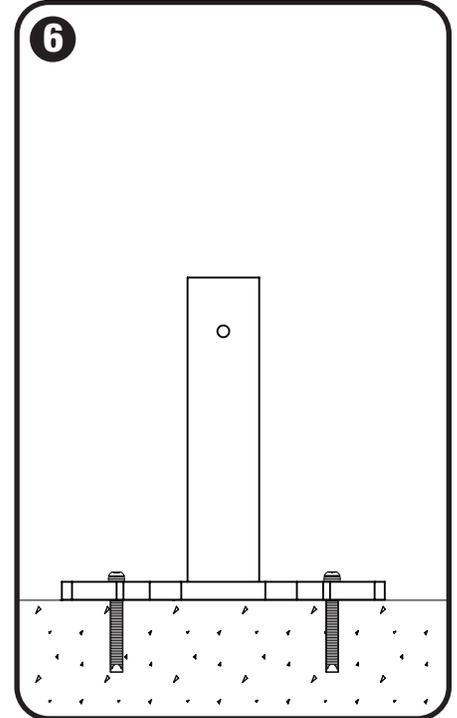


Tighten bolts

- Tighten bolts until snug.

SOLERIS SUNSHADE

SURFACE MOUNT WITH TANGENT TABLE ENSEMBLE INSTALLATION INSTRUCTIONS


STEP BY STEP FOR SOLERIS SUNSHADE USED WITH TANGENT TABLE ENSEMBLE (6-SEAT TANGENT ENSEMBLE SHOWN)

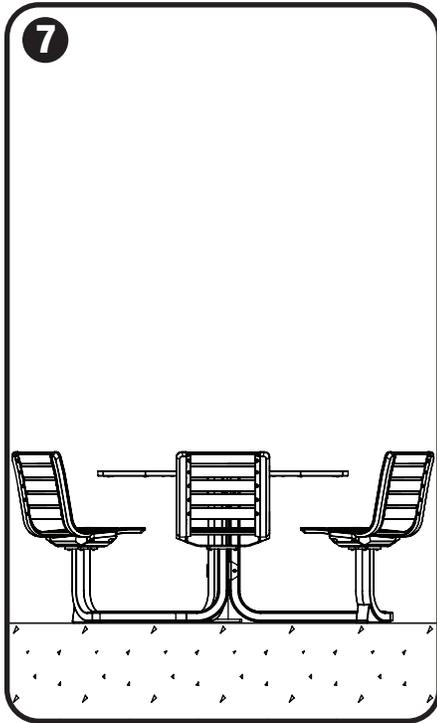

Place table ensemble on top of base plate


- Place table ensemble on top of the sunshade base plate at desired location to make sure that they are aligned.

NOTE: Table ensembles should be completely assembled to determine dimensions and proper positioning.

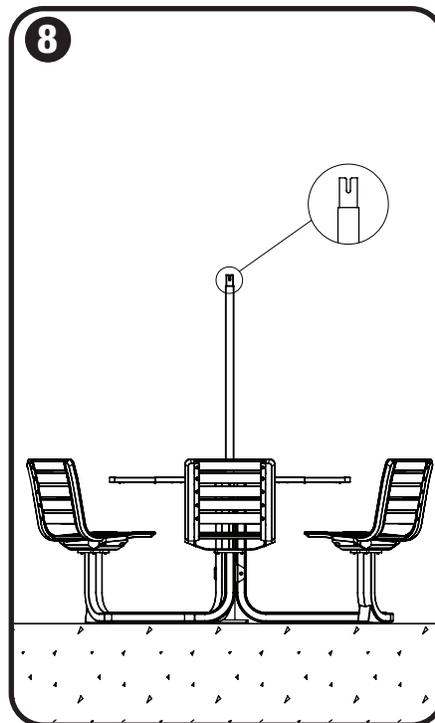

Put sunshade pole into the base plate

- Place sunshade pole, with notch facing up, through the table into the base plate to make sure that the sunshade and table are aligned.

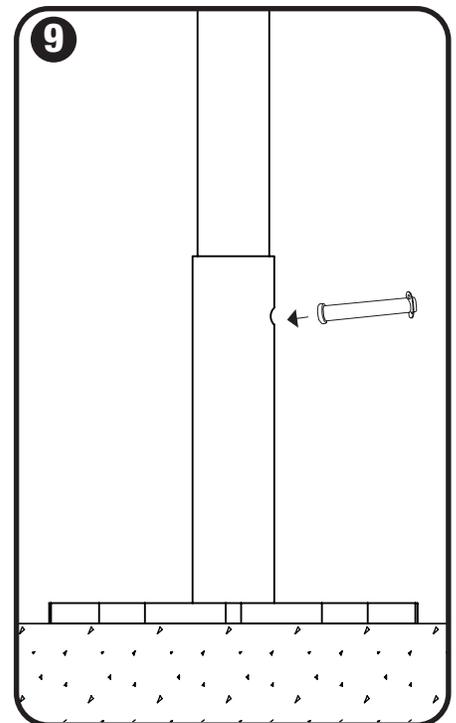


Insert locking pin to affix mounting pole to mounting assembly

- Line up the pre-drilled holes in the mounting pole and mounting pole sleeve, and insert the locking pin.

SOLERIS SUNSHADE


SURFACE MOUNT WITH TANGENT TABLE ENSEMBLE INSTALLATION INSTRUCTIONS

STEP BY STEP FOR SOLERIS SUNSHADE USED WITH TANGENT TABLE ENSEMBLE (6-SEAT TANGENT ENSEMBLE SHOWN)

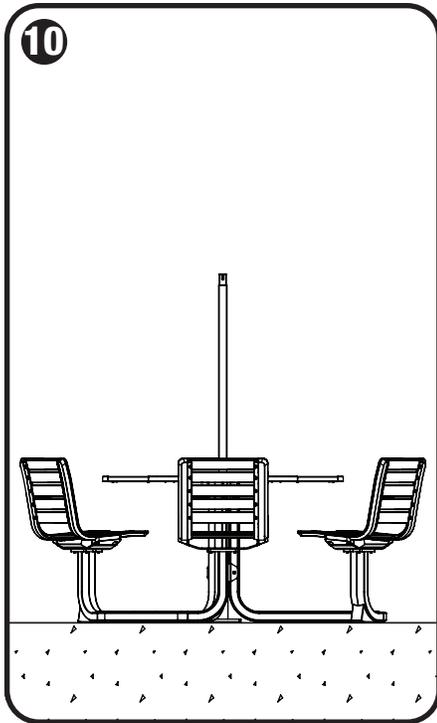


Continue Table Ensemble Surface Mount Installation

- Continue with the surface mount installation of the table ensemble. Please refer to the table surface mount installation instructions, provided separately.

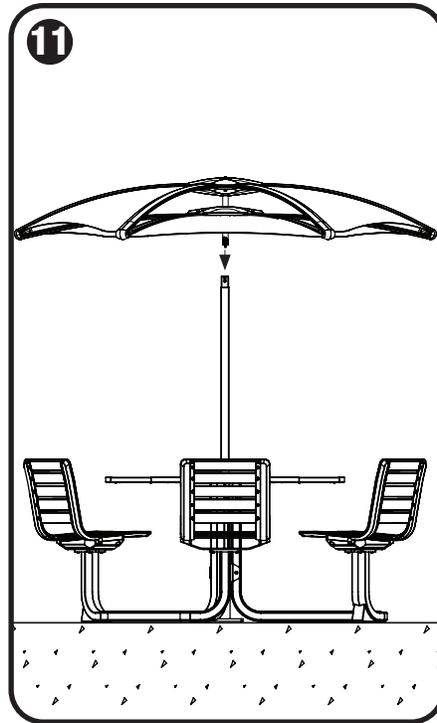

Slide sunshade assembly onto mounting pole

- Slide the tube in the center of the sunshade assembly onto the mounting pole, linking the two pieces together.

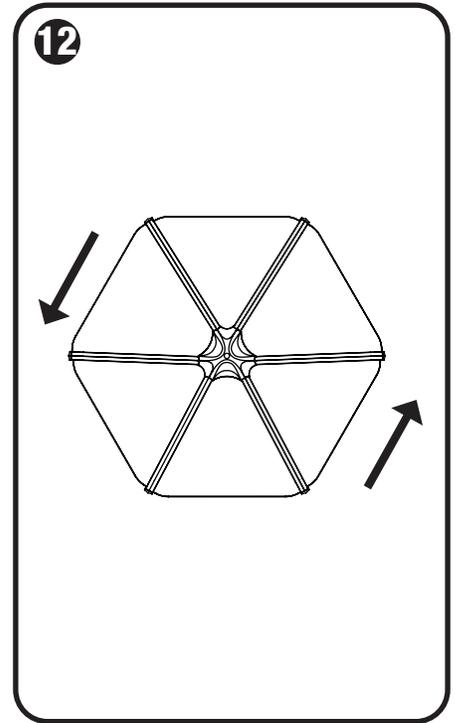


Rotate sunshade

- Rotate sunshade until it engages with pins.

SOLERIS SUNSHADE

SURFACE MOUNT WITH TANGENT TABLE ENSEMBLE INSTALLATION INSTRUCTIONS

STEP BY STEP FOR SOLERIS SUNSHADE USED WITH TANGENT TABLE ENSEMBLE (6-SEAT TANGENT ENSEMBLE SHOWN)

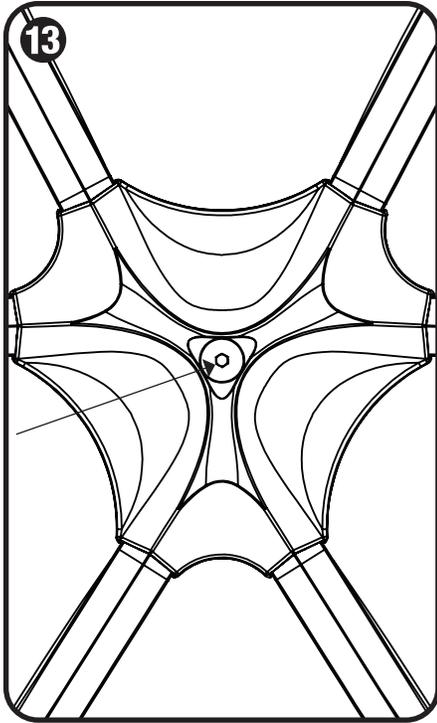

Tighten bolt on top of sunshade

- Tighten bolt on top of sunshade with ratchet until snug.