



BISTRO™ TABLE

SURFACE MOUNT INSTALLATION INSTRUCTIONS


MATERIALS INCLUDED

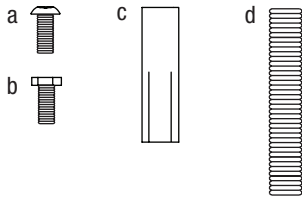

TOOLS NEEDED

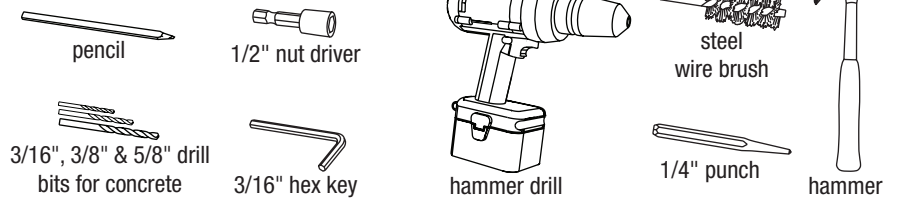


STEP BY STEP FOR ALL SURFACE MOUNTED BISTRO TABLES

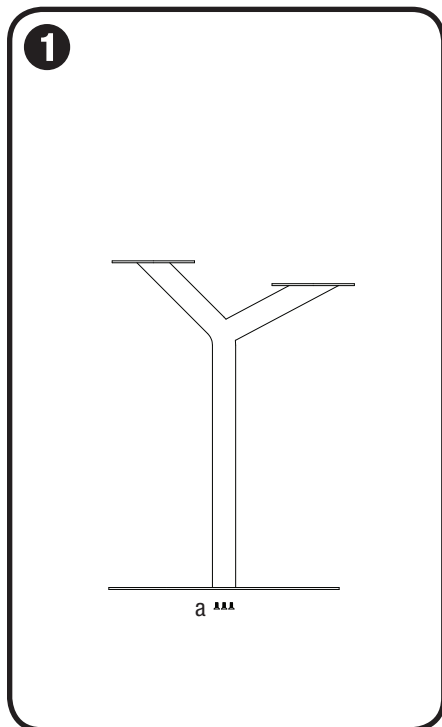


Attach base to column

- Use 3/16" hex key to attach base to column using 5/16"-24 x 3/4" button head cap screws (a).

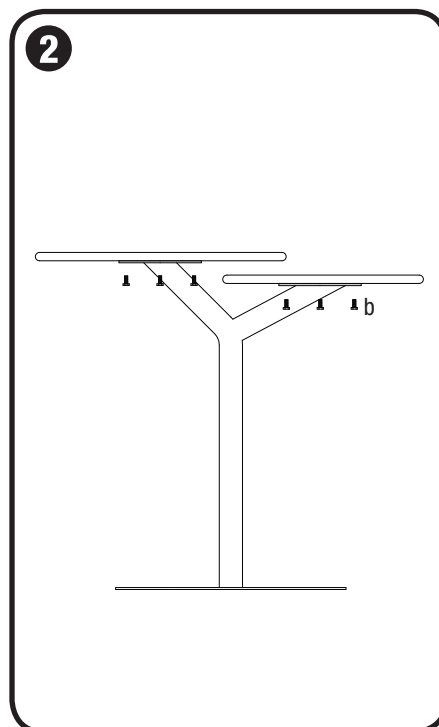

Attach table tops to column

- Use drill with 1/2" nut driver (or socket wrench with 1/2" socket) to attach table tops to column with 5/16"-18 x 3/4" hex head bolts (b).

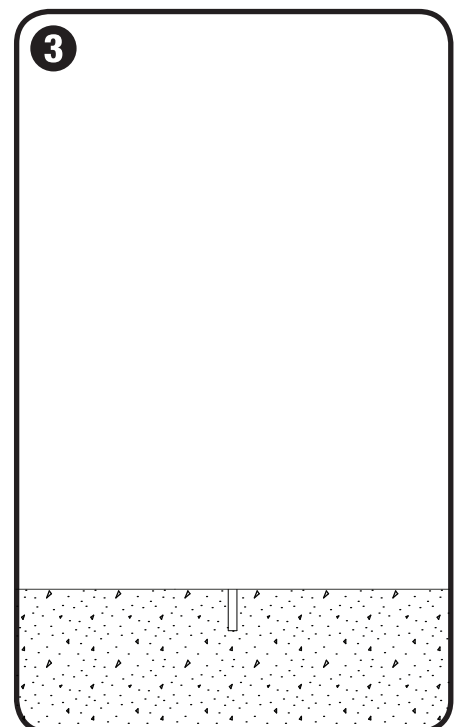


Mark and drill anchor hole

- Locate desired position for center of table on ground and mark with a pencil. Use hammer drill to drill 2-1/4" deep x 5/8" diameter anchor hole at marked location using a 5/8" drill bit suitable for concrete drilling.

NOTE: Forms+Surfaces recommends starting holes with 3/16" diameter drill bit followed by 3/8" and finally 5/8" for maximum accuracy.


BISTRO™ TABLE

SURFACE MOUNT INSTALLATION INSTRUCTIONS

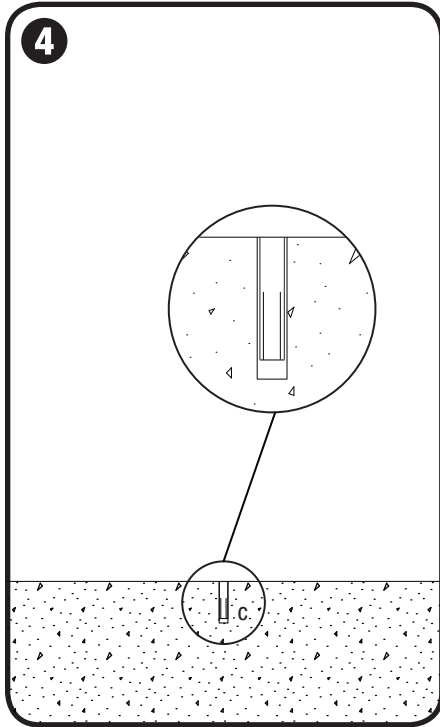


Insert and set anchor

- Use compressed air and steel wire brush to clean anchor hole.
- Insert 1/2"-13 x 2" anchor (c) into anchor hole and use hammer to tap anchor top flush with ground level.
- Use 1/4" punch and hammer to set anchor by driving down the center of anchor until it stops.

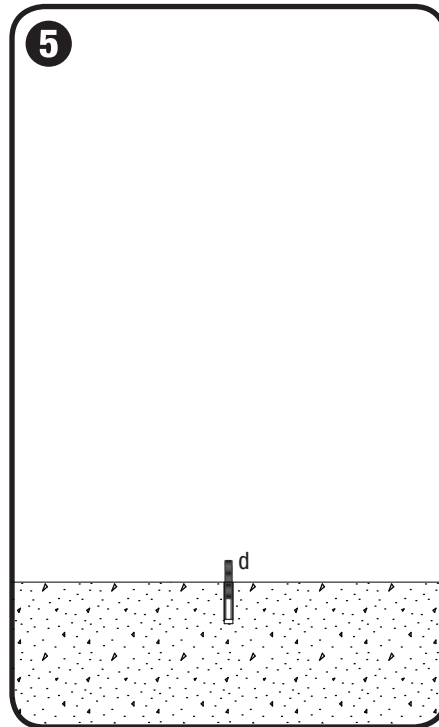

Insert all-thread rod

- Thread 1/2"-13 x 3" all-thread rod (d) into anchor until it stops.

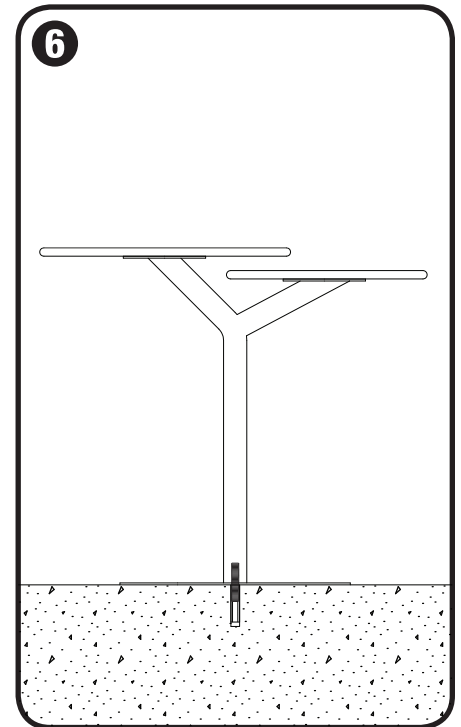

Attach table

- Carefully position table on top of all-thread rod and slowly rotate table clockwise until flush with ground.