

BOARDWALK™ BENCH

SURFACE MOUNT INSTALLATION INSTRUCTIONS

MATERIALS INCLUDED


7/32" hex bit for
tamper-resistant screws




TOOLS NEEDED




pencil



3/16", 3/8" & 1/2" drill
bits for concrete

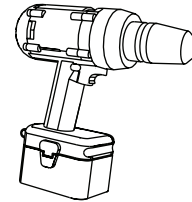


hammer drill



steel
wire brush




1/4" punch



hammer


STEP BY STEP FOR BOARDWALK SURFACE MOUNT BENCH MODELS

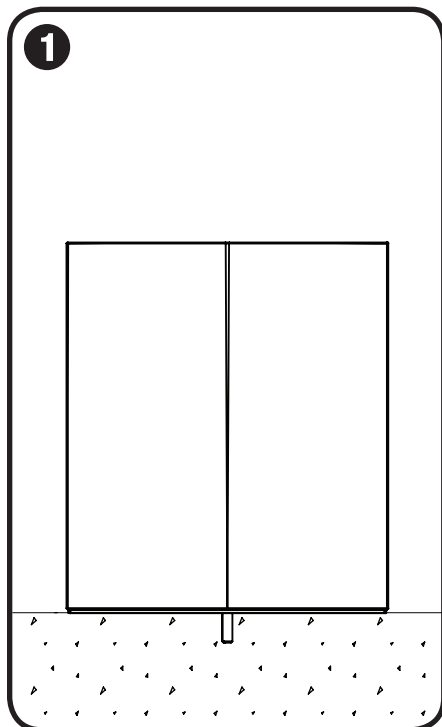

Mark hole locations

- Place bench in desired location. Mark center of each hole location with a pencil.


NOTE: Only one side of bench is shown. The holes on both ends of the bench will need to be marked.

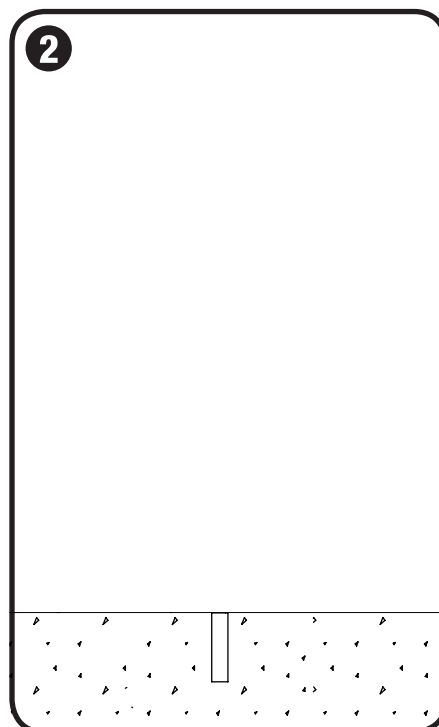

Drill holes

- Use hammer drill to drill 1-7/8" deep x 1/2" diameter anchor hole at each marked location using a 1/2" drill bit suitable for concrete drilling.

NOTE: Forms+Surfaces recommends starting holes with 3/16" diameter drill bit followed by 3/8" and finally 1/2" for maximum accuracy.

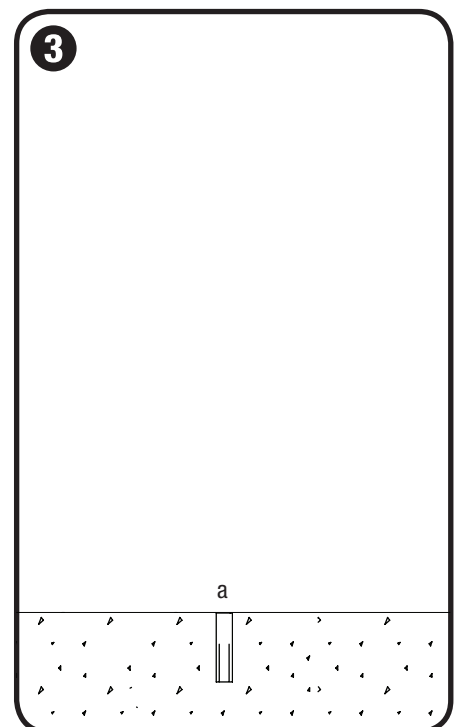


Fill holes & insert anchors

- Use compressed air and steel wire brush to clean each anchor hole.
- Insert 3/8"-16 x 1-1/2" anchor (a) into each anchor hole and use hammer to tap anchor tops flush with the ground level.
- Use 1/4" punch and hammer to set anchors by driving down the center of each anchor until it stops.

BOARDWALK™ BENCH


SURFACE MOUNT INSTALLATION INSTRUCTIONS

STEP BY STEP FOR BOARDWALK SURFACE MOUNT BENCH MODELS

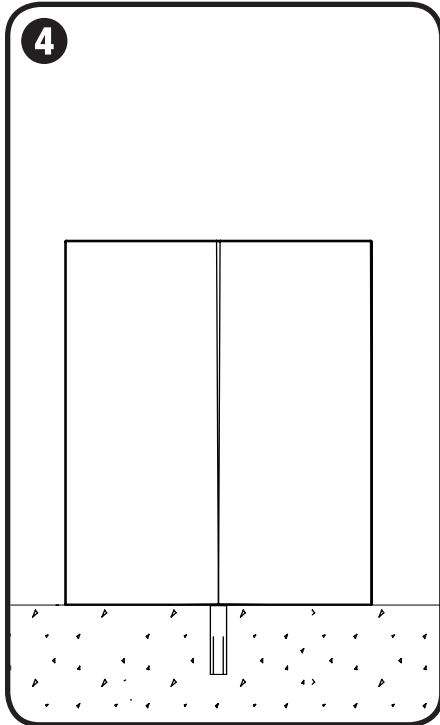


Position bench

- Position bench so that mounting holes line up with anchors.

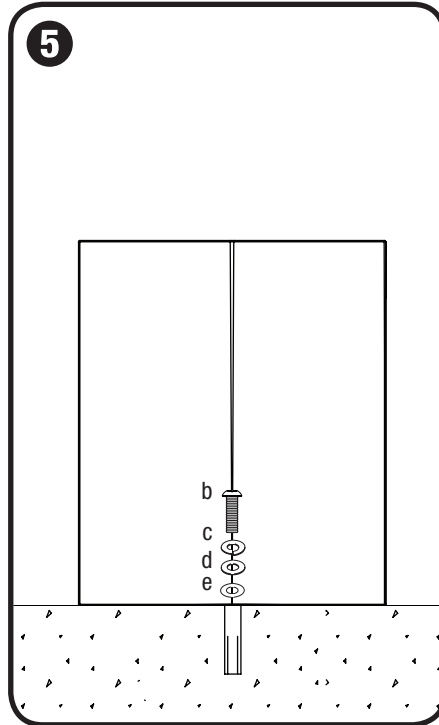

Attach bench

- Slide 3/8" stainless steel lock washer (c), 3/8" stainless steel flat washer (d), and 3/8" nylon flat washer (e) onto each 3/8"-16 x 1" tamper-resistant button head cap screw (b).
- Insert screws into mounting holes in bench and thread into anchors using provided 7/32" hex bit for tamper-resistant screws.

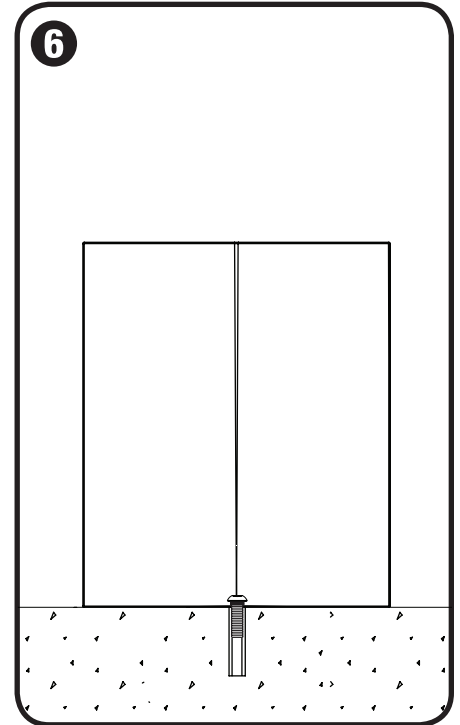

Tighten screws

- Tighten screws until snug.