





BUTTLER® ASH RECEPTACLE

WALL MOUNT INSTALLATION INSTRUCTIONS


HARDWARE INCLUDED

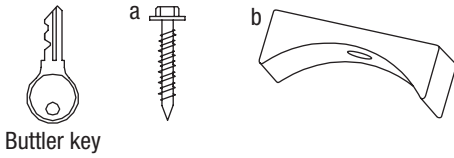

TOOLS NEEDED

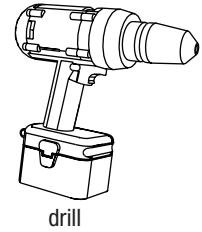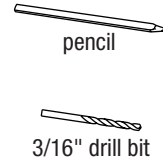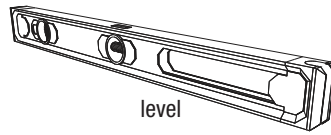


STEP BY STEP

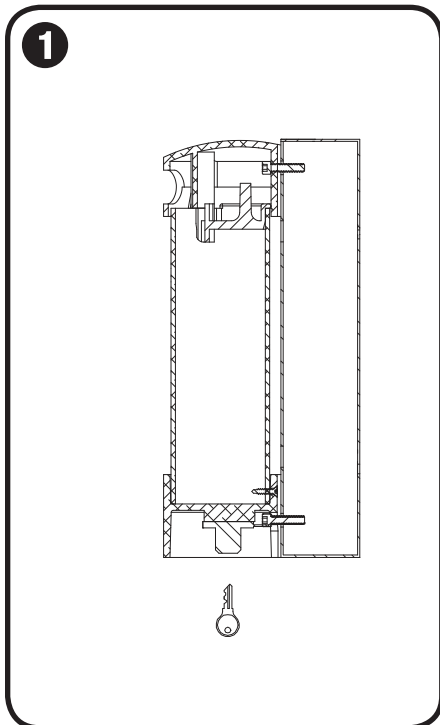


1 Unlock

- Locate lock on underside of base.
- Insert Buttler key and turn 1/2 turn clockwise.

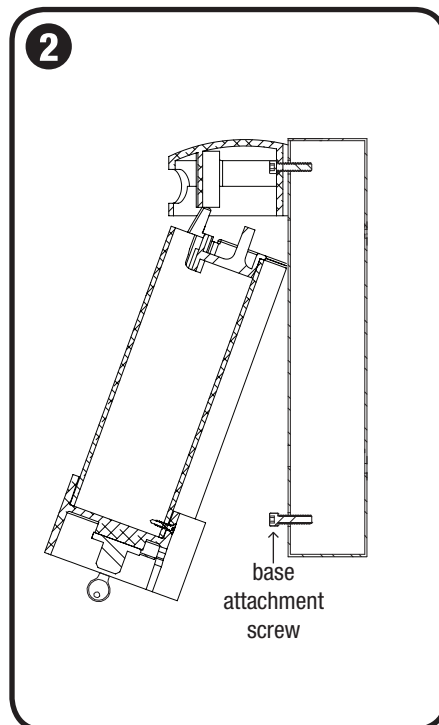

2 Remove body

- Lift body up and tilt away from square mounting tube far enough to clear base attachment screw.
- Slide body down, out of top end cap.

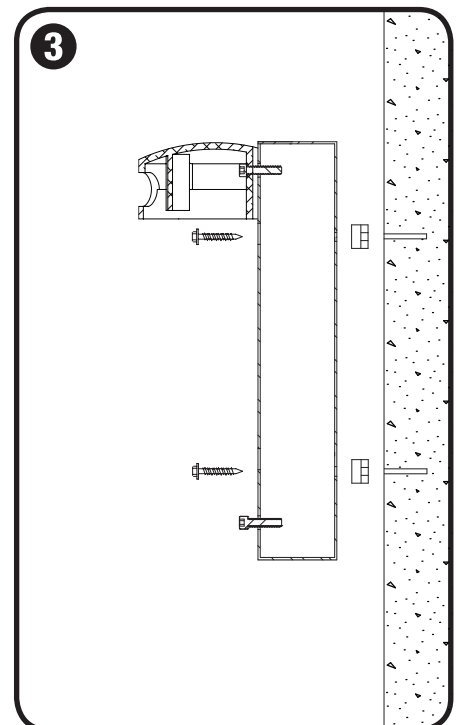


3 Mark hole locations & drill holes

- Hold and level wall mount and top end cap in desired position and use a pencil to mark hole locations.
- Use hammer drill to drill 1-1/2" deep x 3/16" diameter pilot hole at each marked location using a 3/16" drill bit suitable for concrete drilling.

BUTTLER® ASH RECEPTACLE


WALL MOUNT INSTALLATION INSTRUCTIONS

STEP BY STEP

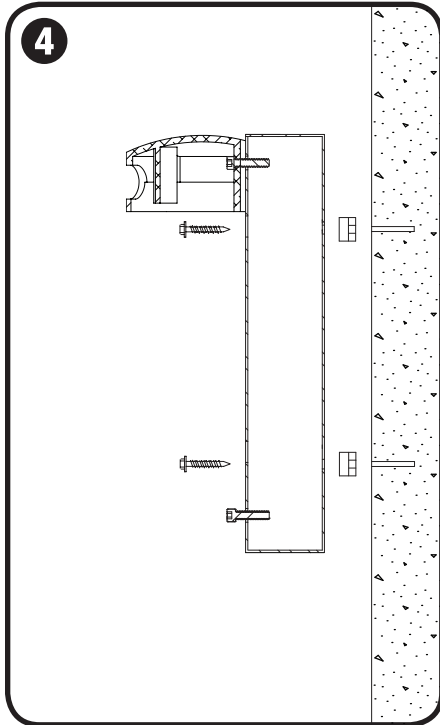


Attach to wall

- Slide 1/4" x 1-1/4" hex-washer head slotted concrete screw through each hole in wall mount pole. Then slide wall mount bracket onto each screw.
- Use hammer drill or socket wrench to screw unit into concrete until snug.

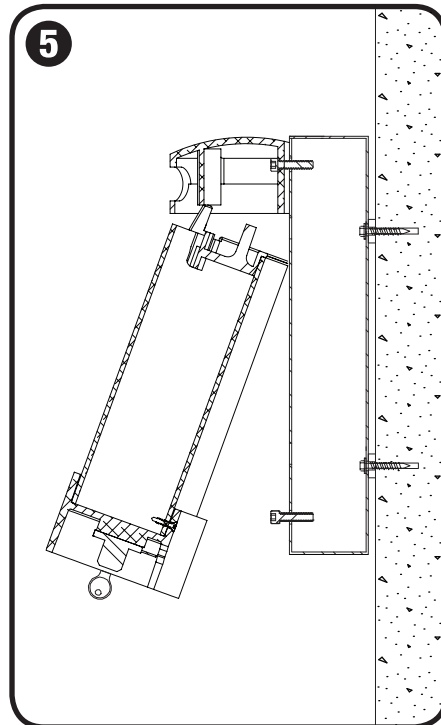

Replace body

- Tilt base away from square mounting tube and slide up into top end cap.
- Push base back against square mounting tube and pull down until engaged with base attachment screw.

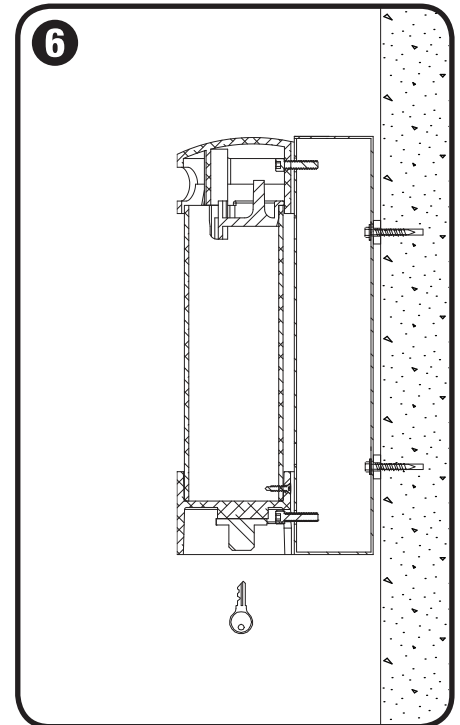

Lock

- Turn Buttler key 1/2 turn counterclockwise.
- Verify that locking plate has rotated under base attachment screw.

NOTE: The provided screws for this installation are included as a convenience. It is the installer's responsibility to determine the suitability of the mounting hardware for site conditions and, if necessary, provide alternative mounting hardware.