
COLUMN TABLE

FREESTANDING INSTALLATION INSTRUCTIONS

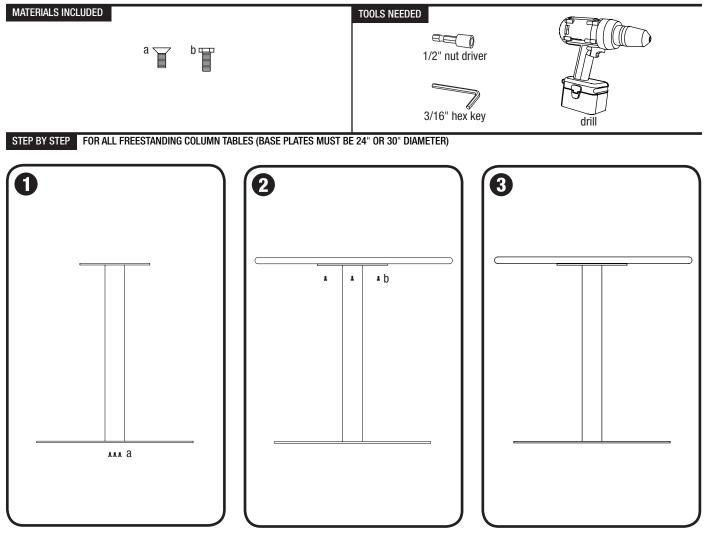

Attach base to column

• Use 3/16" hex key to attach base to column using 5/16"-24 x 3/4" flat head cap screws (a).

Attach table top to column

 Use drill with 1/2" nut driver (or socket wrench with 1/2" socket) to attach table top to column with 5/16"-18 x 3/4" hex head bolts (b).

Tighten screws

• Tighten all screws until snug.

T 800.451.0410 | www.forms-surfaces.com

FORMS+SURFACES®

© 2013 Forms+Surfaces® | All dimensions are nominal. Specifications and pricing subject to change without notice. For the most current version of this document, please refer to our website at www.forms-surfaces.com.