



DISPATCH™ RECEPTACLE

SURFACE MOUNT WITH TENSL UHPC BASE INSTALLATION INSTRUCTIONS


MOUNTING KIT (SOLD SEPARATELY)

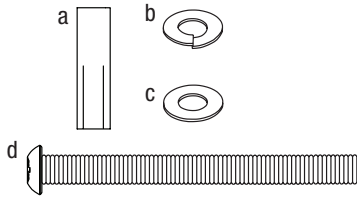

TOOLS NEEDED

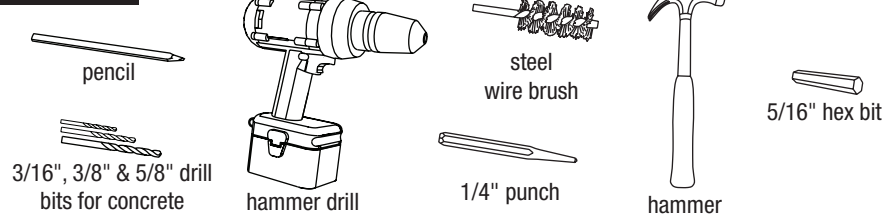

STEP BY STEP FOR ALL SURFACE MOUNTED DISPATCH RECEPTACLES WITH TENSL UHPC BASES (SECTION VIEW SHOWN)

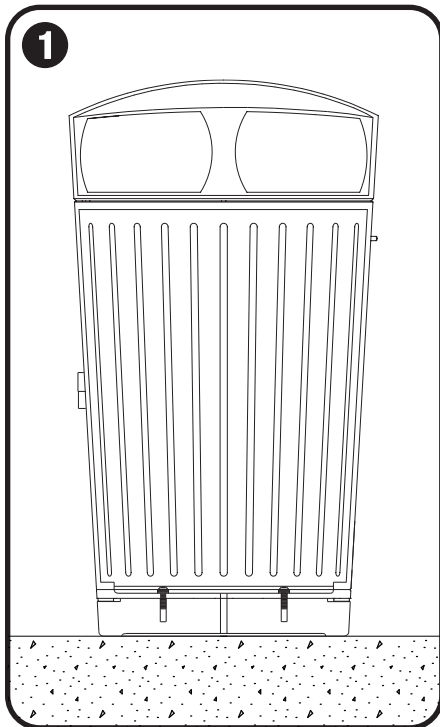

1 Mark hole location


- Place receptacle in desired location. Mark center of center hole location in base with a pencil.



2 Drill hole

- Use hammer drill to drill 2-1/4" deep x 5/8" diameter anchor hole at marked location using a 5/8" drill bit suitable for concrete drilling.

NOTE: Forms+Surfaces recommends starting hole with 3/16" diameter drill bit followed by 3/8" and finally 5/8" for maximum accuracy.

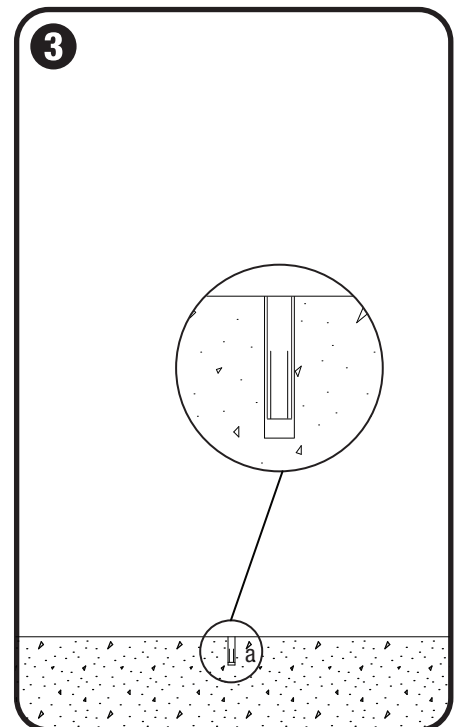


3 Insert & set anchor

- Use compressed air and steel wire brush to clean anchor hole.
- Insert 1/2"-13 x 2" anchor (a) into anchor hole and use hammer to tap anchor top flush with ground level.
- Use 1/4" punch and hammer to set anchor by driving down the center of anchor until it stops.

DISPATCH™ RECEPTACLE


SURFACE MOUNT WITH TENSL UHPC BASE INSTALLATION INSTRUCTIONS

STEP BY STEP FOR ALL SURFACE MOUNTED DISPATCH RECEPTACLES WITH TENSL UHPC BASES (SECTION VIEW SHOWN)

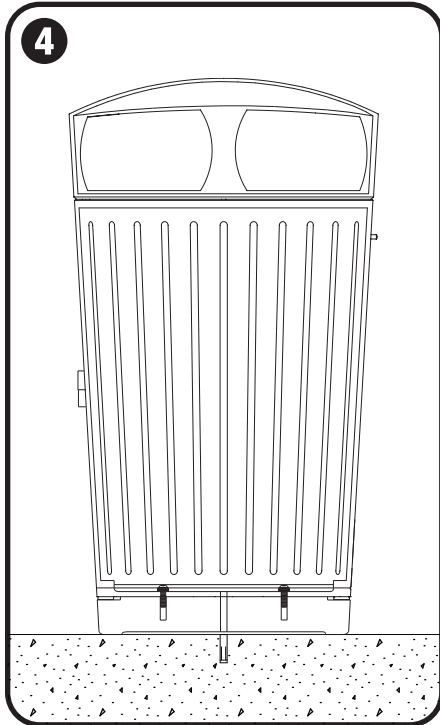


Position receptacle

- Position receptacle so that center mounting hole in base lines up with anchor.

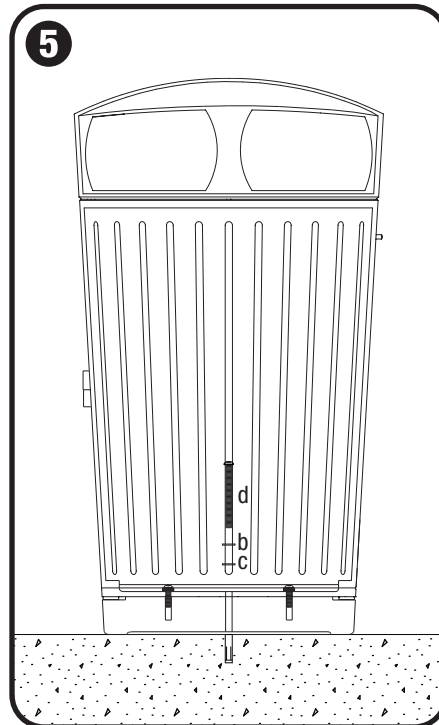

Attach receptacle

- Slide 1/2" stainless steel lock washer (b), then 1/2" stainless steel flat washer (c) onto 1/2"-13 x 5" button head cap bolt (d).
- Insert bolt into mounting hole in base and thread into anchor using 5/16" hex bit or key.

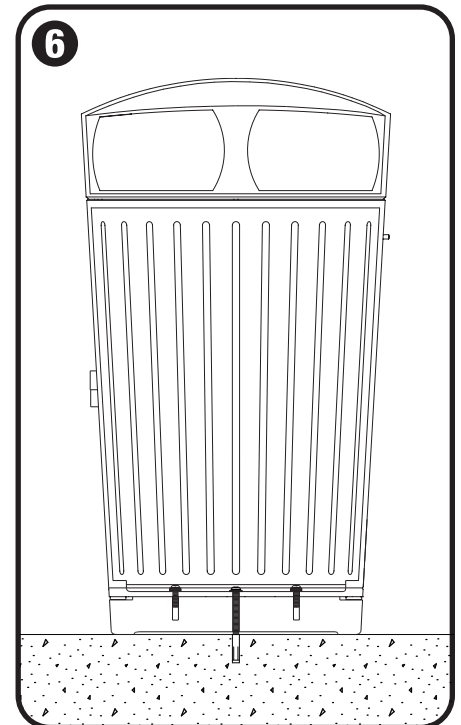

Tighten bolt

- Tighten bolt until snug.
- Place liner(s) inside receptacle.