
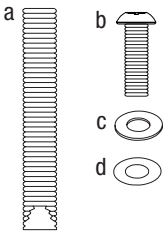
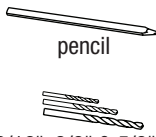
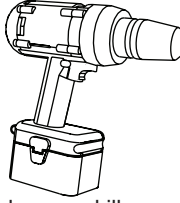
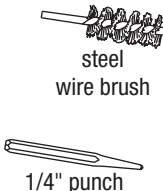
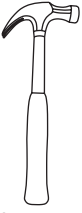
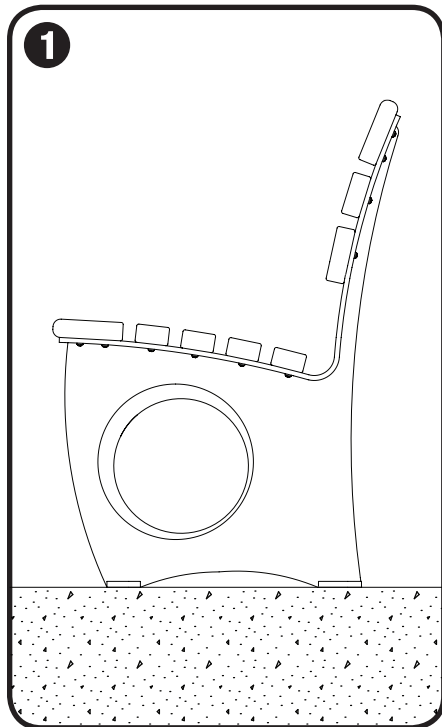


# LEDA™ BENCH

## SURFACE MOUNT INSTALLATION INSTRUCTIONS

 <p>5/16" hex bit for tamper-resistant screws</p>	 <p>a b c d</p>	<p><b>TOOLS NEEDED</b></p>	 <p>pencil 3/16", 3/8" &amp; 5/8" drill bits for concrete</p>	 <p>hammer drill</p>	 <p>steel wire brush 1/4" punch</p>	 <p>hammer</p>
--	--	----------------------------	--	--	--	---

**STEP BY STEP** FOR ALL SURFACE MOUNTED LEDA BENCHES (SBLED-3B SHOWN)



### Mark hole locations


- Place bench in desired location. Mark center of each hole location with a pencil.



### Drill holes

- Use hammer drill to drill 2-1/4" deep x 5/8" diameter anchor hole at each marked location using a 5/8" drill bit suitable for concrete drilling.

NOTE: Forms+Surfaces recommends starting holes with 3/16" diameter drill bit followed by 3/8" and finally 5/8" for maximum accuracy.

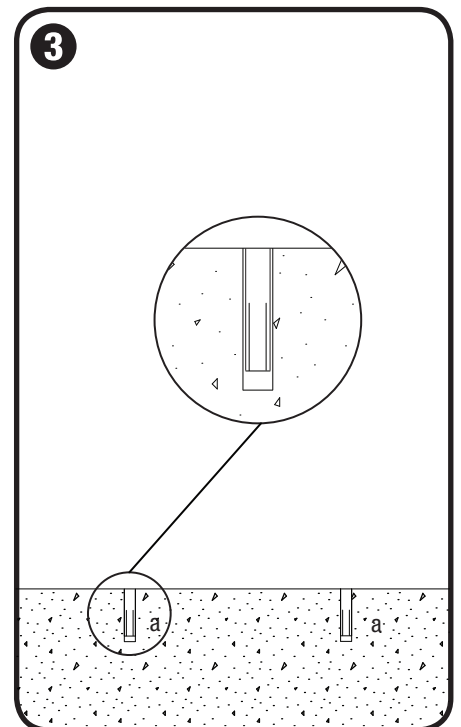


### Insert & set anchors

- Use compressed air and steel wire brush to clean each anchor hole.
- Insert 1/2"-13 x 2" anchor (a) into each anchor hole and use hammer to tap anchor tops flush with ground level.
- Use 1/4" punch and hammer to set anchors by driving down the center of each anchor until it stops.

# LEDA™ BENCH


## SURFACE MOUNT INSTALLATION INSTRUCTIONS

### STEP BY STEP FOR ALL SURFACE MOUNTED LEDA BENCHES (SBLED-3B SHOWN)

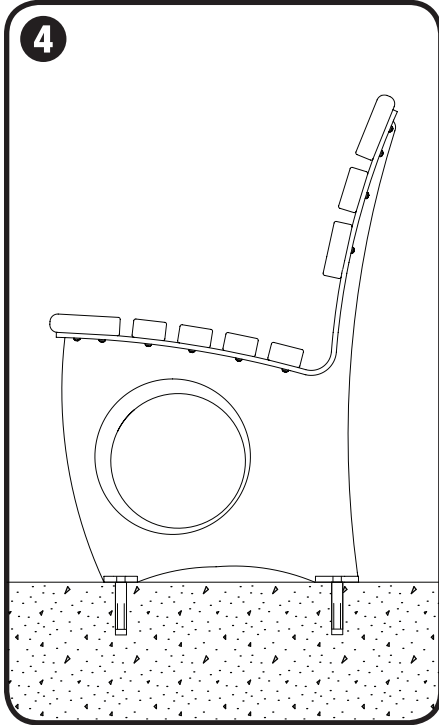


#### Position bench

- Position bench so that mounting holes line up with anchors.

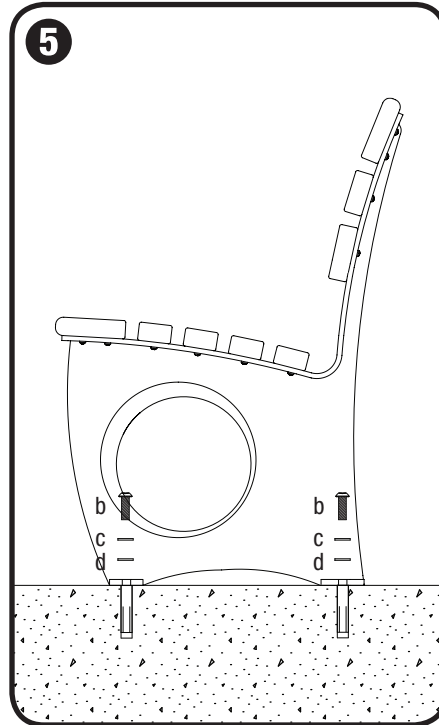

#### Attach bench

- Slide 1/2" stainless steel flat washer (c) then 1/2" nylon flat washer (d) onto each 1/2"-13 x 1" tamper-resistant cap screw (b).
- Insert screws into mounting holes in bench and thread into anchors using provided 5/16" hex bit for tamper-resistant screws.

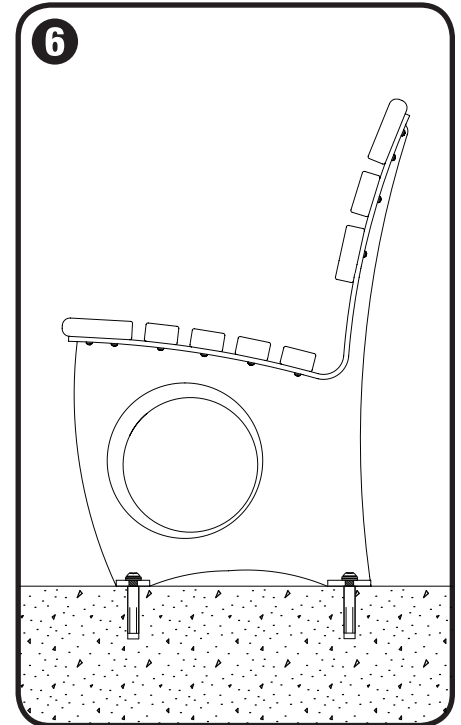

#### Tighten screws

- Tighten screws until snug.