



# DISPATCH™ RECEPTACLE

## SURFACE MOUNT WITHOUT CONCRETE BASE INSTALLATION INSTRUCTIONS


### MOUNTING KIT (SOLD SEPARATELY)

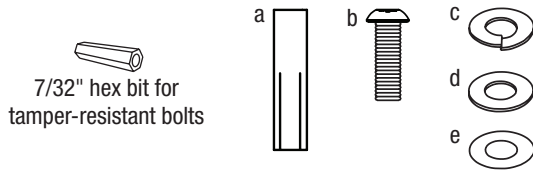

### TOOLS NEEDED

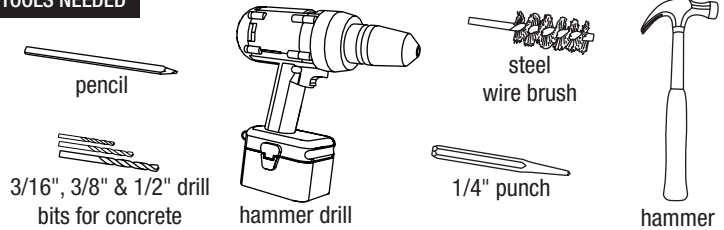

### STEP BY STEP FOR ALL SURFACE MOUNTED DISPATCH RECEPTACLES WITHOUT CONCRETE BASES (SECTION VIEW SHOWN)

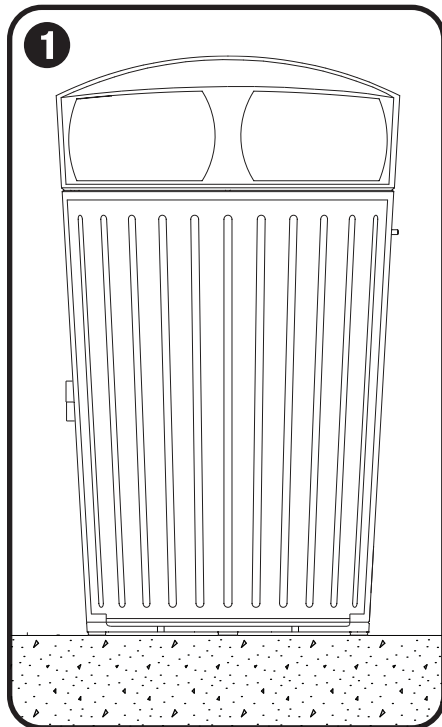

#### Mark hole locations


- Place receptacle in desired location. Mark center of each hole location in base with a pencil.



#### Drill holes

- Use hammer drill to drill 1-7/8" deep x 1/2" diameter anchor hole at each marked location using a 1/2" drill bit suitable for concrete drilling.

NOTE: Forms+Surfaces recommends starting holes with 3/16" diameter drill bit followed by 3/8" and finally 1/2" for maximum accuracy.

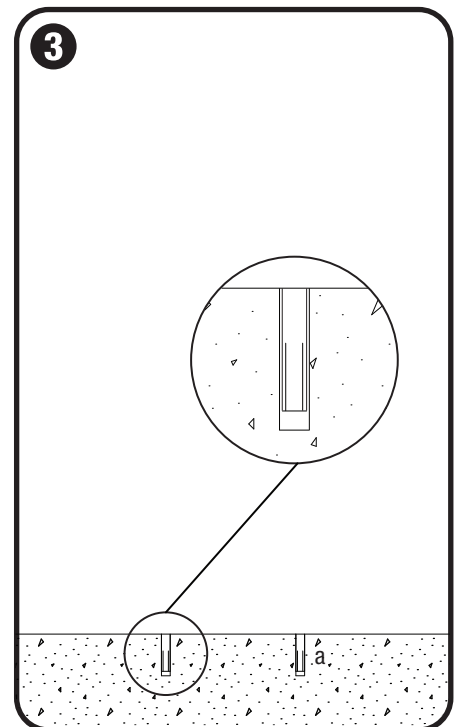


#### Insert & set anchors

- Use compressed air and steel wire brush to clean each anchor hole.
- Insert 3/8"-16 x 1-1/2" anchor (a) into each anchor hole and use hammer to tap anchor tops flush with ground level.
- Use 1/4" punch and hammer to set anchors by driving down the center of each anchor until it stops.

# DISPATCH™ RECEPTACLE


## SURFACE MOUNT WITHOUT CONCRETE BASE INSTALLATION INSTRUCTIONS

### STEP BY STEP FOR ALL SURFACE MOUNTED DISPATCH RECEPTACLES WITHOUT CONCRETE BASES (SECTION VIEW SHOWN)

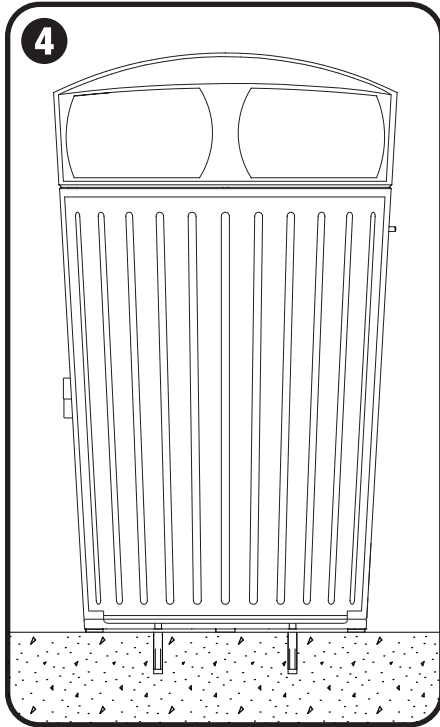


#### Position receptacle

- Position receptacle so that mounting holes line up with anchors.

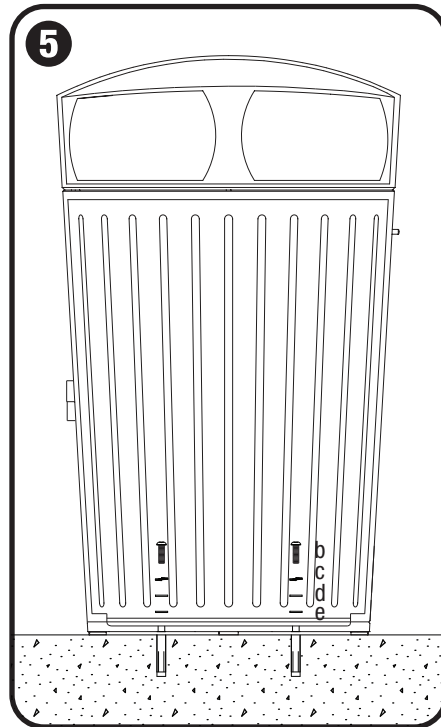

#### Attach receptacle

- Slide 3/8" stainless steel lock washer (c), then 3/8" stainless steel flat washer (d) and 3/8" nylon flat washer (e) onto each 3/8"-16 x 1" tamper-resistant button head cap bolt (b).
- Insert bolts into mounting holes in receptacle and thread into anchors using 7/32" hex bit for tamper-resistant bolts.

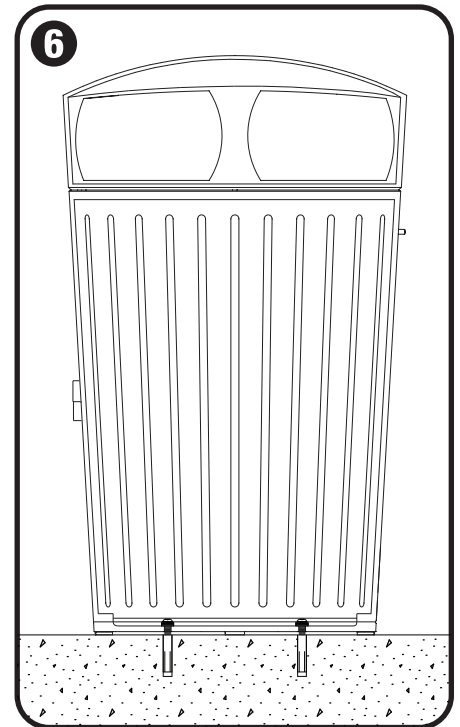

#### Tighten bolts

- Tighten bolts until snug.
- Place liner(s) inside receptacle.