









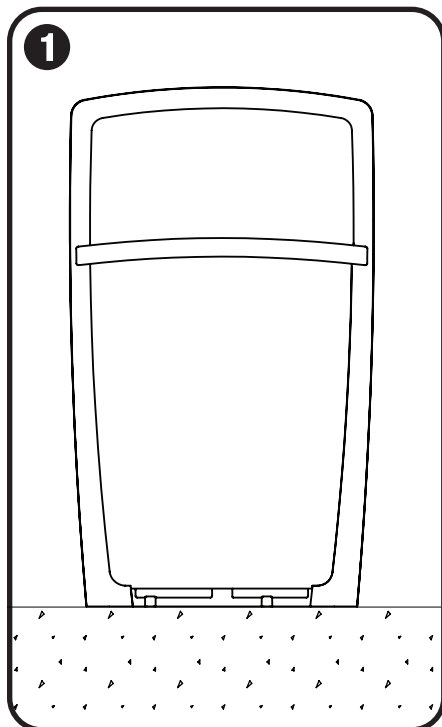


CORDIA™ BIKE RACK

SURFACE MOUNT INSTALLATION INSTRUCTIONS

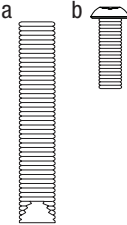INCLUDED	MOUNTING KIT (SOLD SEPARATELY)	TOOLS NEEDED
 <p>c</p>	 <p>1/8" hex bit for tamper-resistant bolts</p>  <p>epoxy</p>  <p>a b</p>	 <p>pencil</p>  <p>1/4", 1/2" & 3/4" drill bits for concrete</p>  <p>hammer drill</p>  <p>steel wire brush</p>  <p>epoxy gun</p>  <p>Loctite</p>

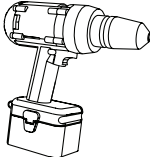STEP BY STEP FOR ALL CORDIA BIKE RACKS



Mark hole locations


- Place bike rack in desired location. Mark center of each hole location with a pencil.



Drill holes

- Use hammer drill to drill 4.5" deep x 3/4" diameter anchor hole at each marked location using a 3/4" drill bit suitable for concrete drilling.

NOTE: Forms+Surfaces recommends starting holes with 1/4" diameter drill bit followed by 1/2" and finally 3/4" for maximum accuracy.

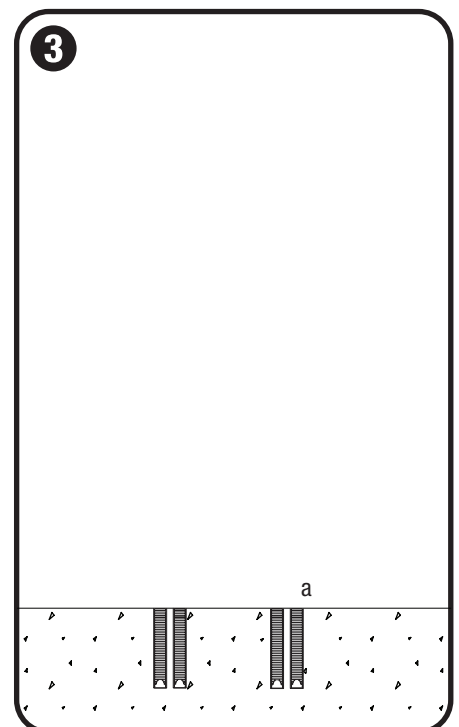


Fill holes & insert anchors

- Use compressed air and steel wire brush to clean each anchor hole in accordance with epoxy instructions.
- Use epoxy in epoxy gun to fill each anchor hole 5/8 of the hole depth in accordance with epoxy instructions.
- Insert 3/8"-16 x 4-1/4" epoxy anchor (a) into each anchor hole so anchor top is flush with ground. Allow proper curing time according to cure schedule on epoxy instructions before moving on to Step 4.

CORDIA™ BIKE RACK


SURFACE MOUNT INSTALLATION INSTRUCTIONS

STEP BY STEP FOR ALL CORDIA BIKE RACKS

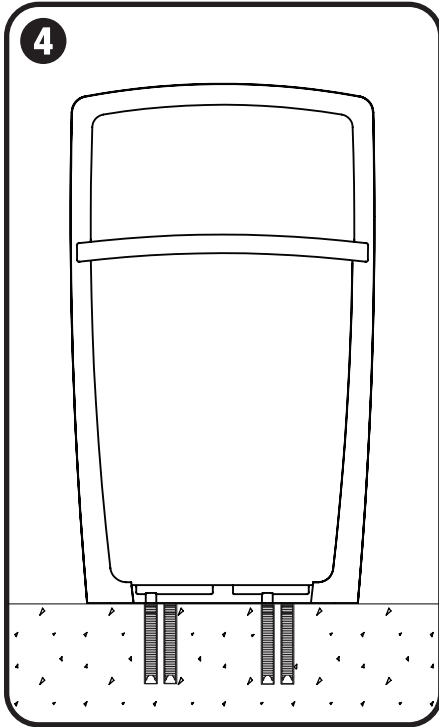

Position bike rack


- Position bike rack so that mounting holes line up with anchors.

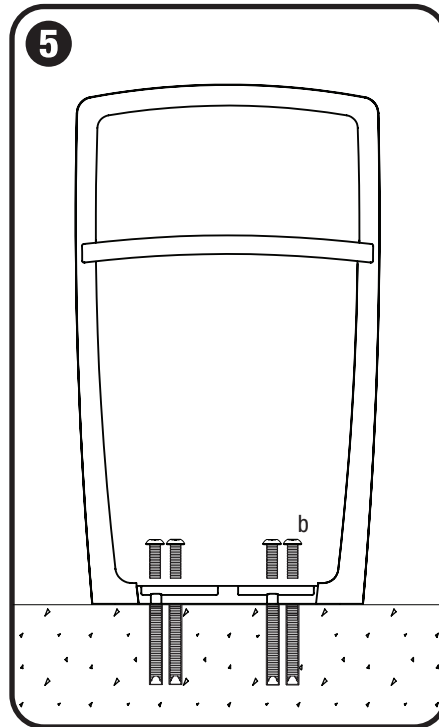

Attach bike rack and tighten bolts

- Insert four 3/8"-16 x 1-3/4" button head cap bolts (b) into mounting holes in bike rack. Thread anchors using 1/8" hex bit for tamper-resistant bolts.
- Tighten all bolts.


NOTE: Forms+Surfaces recommends applying Loctite® or similar thread-locking adhesive.

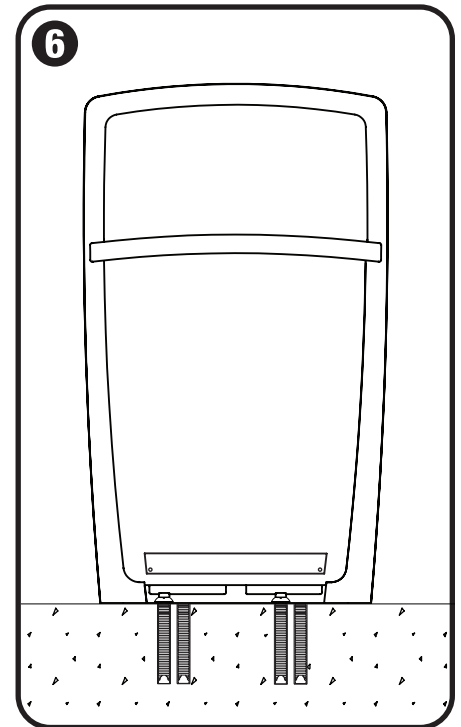

Slide cover plate over base of bike rack

CORDIA™ BIKE RACK

STEP BY STEP FOR ALL CORDIA BIKE RACKS

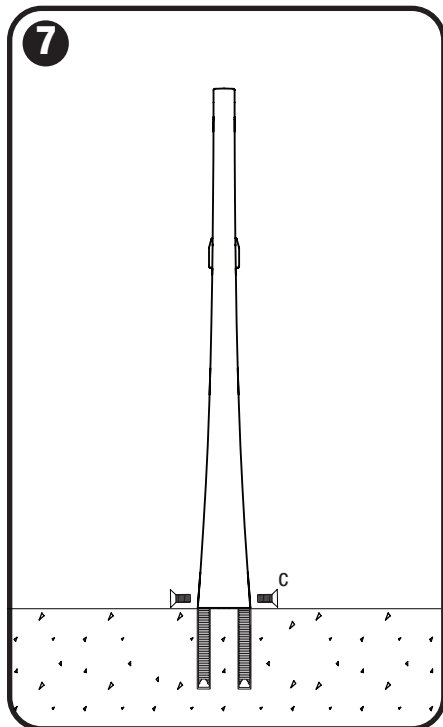

Attach cover plate and tighten bolts

- Thread four 6-32 x 1/2" pin-in-hex flat head bolts (c) through each hole using 1/8" hex bit for tamper-resistant bolts.
- Tighten all bolts.

NOTE: Forms+Surfaces recommends applying Loctite® or similar thread-locking adhesive

CORDIA™ BIKE RACK

SURFACE MOUNT INSTALLATION INSTRUCTIONS

RECOMMENDED BICYCLE RACK SPACING PER ASSOCIATION OF PEDESTRIAN AND BICYCLE PROFESSIONALS (APBP) GUIDELINES FOR ALL CORDIA BIKE RACKS

