
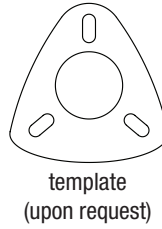



TRIO™ PEDESTRIAN

SURFACE MOUNT INSTALLATION INSTRUCTIONS


MATERIALS INCLUDED



TOOLS NEEDED




STEP BY STEP

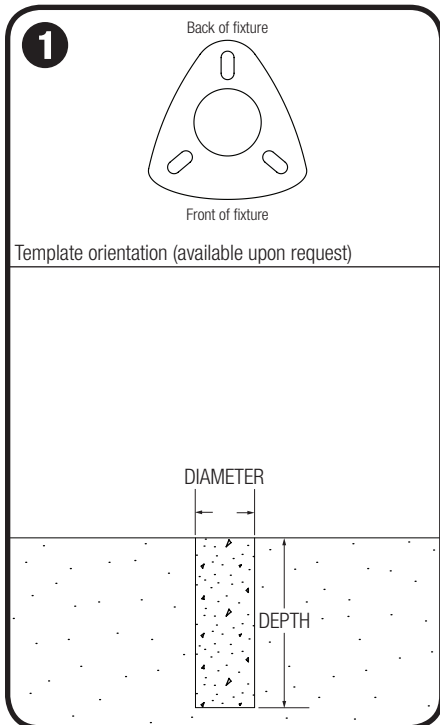


Pour concrete footer

- Mix and pour concrete footer according to concrete manufacturer's instructions.
- A sufficient footer size depends on frost and other conditions to be determined by the installer. A minimum of a 13" diameter x 36" deep footer is recommended.

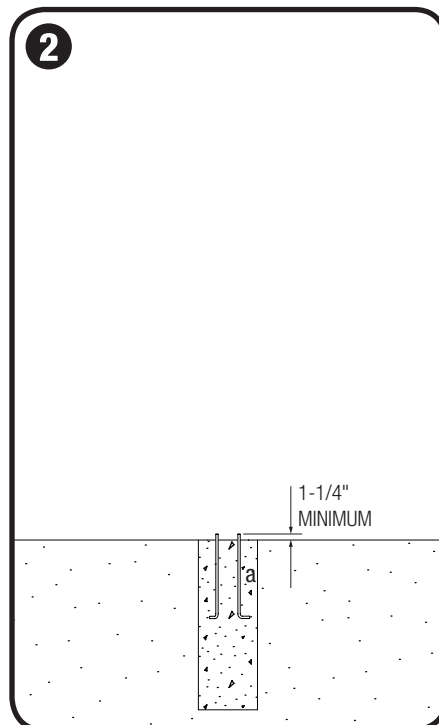

Insert J-bolt anchors

- Insert 1/2"-13 x 18" galvanized steel J-bolt anchors (a) into concrete.
- Use template (included) to position J-bolt anchors in proper locations. Tops of J-bolt anchors must be a minimum of 1-1/4" above concrete surface.
- Allow concrete to set completely, in accordance with concrete manufacturer's instructions, before moving to step 3.

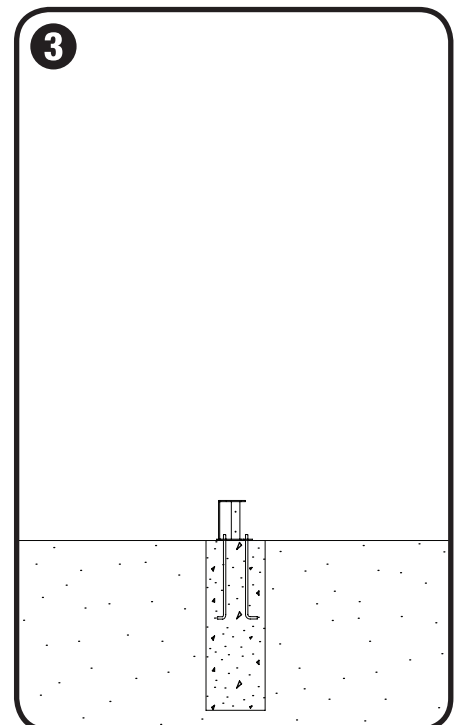


Slide base plate onto J-bolt anchors

- Slide base plate over J-bolt anchors and lower to concrete level.


TRIO™ PEDESTRIAN

STEP BY STEP

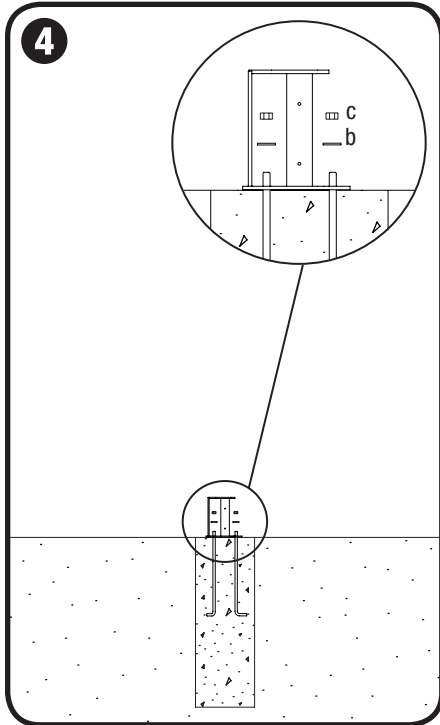

Attach base plate & tighten


- Slide 1/2" washer (b), then thread 1/2"-13 nut (c) onto each J-bolt anchor.
- Use socket wrench and 3/4" socket to tighten all nuts until snug.

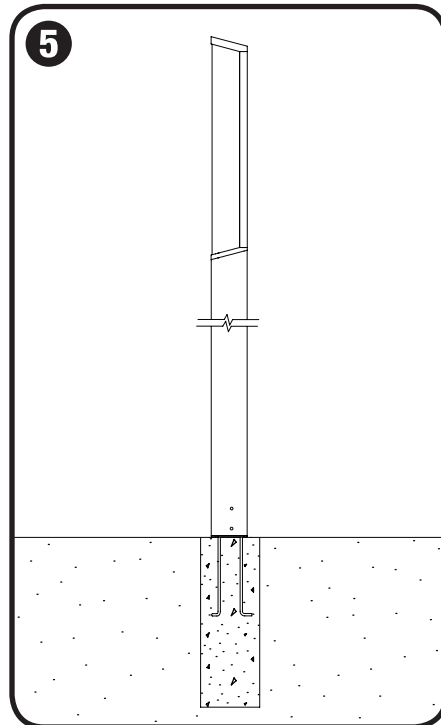

Slide pedestrian onto base plate

- Slide pedestrian over base plate and lower.

NOTE: Pedestrian must be supported until screws are attached and tightened in step 6.

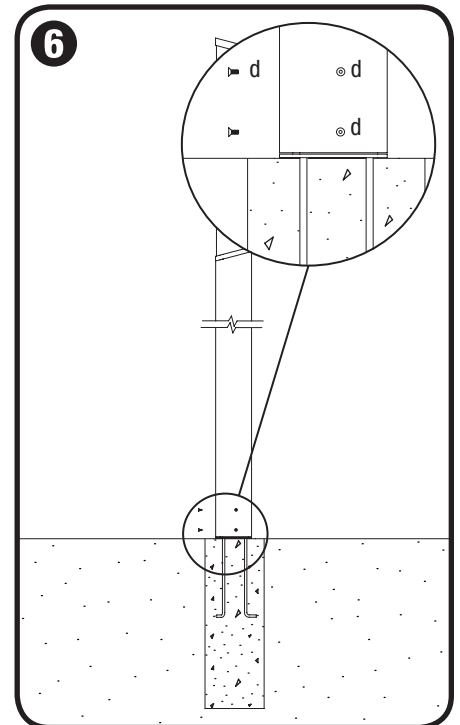

Attach pedestrian to base plate

- Thread 5/16"-18 x 3/4" tamper-resistant flat head cap screw (d) into each hole.
- Use provided 3/16" hex bit for tamper-resistant screws to tighten all screws until snug.