

TECNO RS SEATING SYSTEM


WALL MOUNT INSTALLATION INSTRUCTIONS

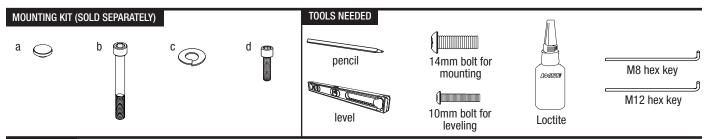


STEP BY STEP

FOR WALL MOUNT CONFIGURATIONS.

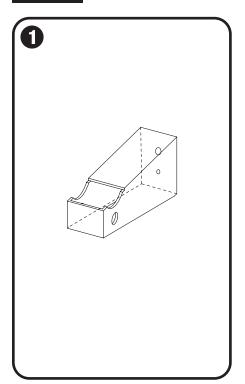

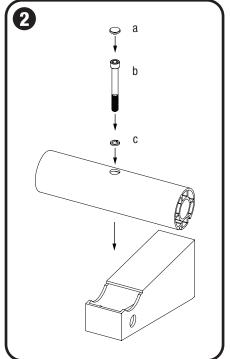

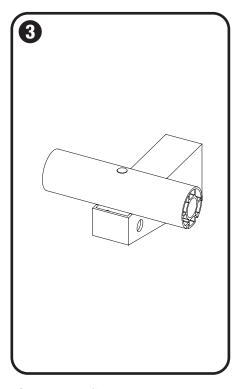

Secure wall mount bracket to wall

- Choose hardware that is appropriate for your application. Mounting bracket accepts 14mm bolt for mounting (top hole) and 10 mm bolt for leveling (bottom hole).
- Use a level to ensure mounting location is level before securing mounting brackets to wall.

Note: Because different wall materials may require different hardware, mounting hardware is not included.

Attach seat rail to freestanding legs

- Once all wall mount brackets are in position, place seat rail onto brackets.
 Ensure that connection holes in the seat rail and brackets align.
- Insert M12 lock washer (c), then M12 x 120 socket head cap bolt (b) into seat rail to secure seat rail to the rail mounting bracket.
- Tighten bolts until snug.
- Fit nylon cap (a) onto the top of socket head cap bolt.

Secure seat rail

• Seat rail should now be secured to the wall mount bracket.

T 800.451.0410 | www.forms-surfaces.com


FORMS+SURFACES®


TECNO RS SEATING SYSTEM

WALL MOUNT INSTALLATION INSTRUCTIONS

STEP BY STEP

FOR WALL MOUNT CONFIGURATIONS.

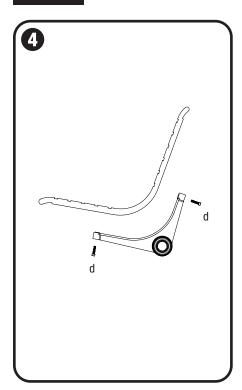

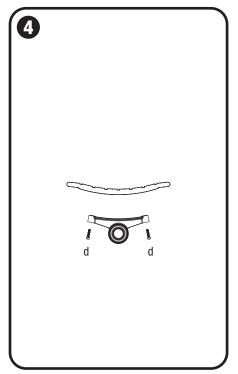

For configurations with backed seats

- Position backed seat on seat bracket ensuring that mounting holes line up.
- Insert M8 x 35 socket head cap bolts (d) using an M8 hex key to secure backed seat to seat bracket.
- Tighten bolts until snug.
 NOTE: Forms+Surfaces recommends applying Loctite[®] or similar threadlocking adhesive.

For configurations with backless seats

- Position backless seat on seat bracket ensuring that mounting holes line up.
- Insert M8 x 35 socket head cap bolts (d) using an M8 hex key to secure backed seat to seat bracket.
- Tighten bolts until snug.

NOTE: Forms+Surfaces recommends applying Loctite® or similar thread-locking adhesive.